

High Rise Apartments Student Accommodation Hotels and Commercial

CORRIDOR, INTERTENANCY,
SHAFT & SERVICE WALLS

DESIGN AND INSTALLATION GUIDE



This Design and Installation Guide has been prepared as a source of information to provide general guidance to consultants – and in no way replaces the services of the professional consultant and relevant engineers designing the project.

When preparing this document the most up-to-date standards and codes were used. However CSR Hebel cannot guarantee that these standards and codes are currently used or applicable in your state or territory.

It is the responsibility of the architectural designer and engineering parties to ensure that the details in this Design and Installation Guide are appropriate for the intended application.

The recommendations of this guide are formulated along the lines of good building practice, but are not intended to be an exhaustive statement of all relevant data.

CONTENTS

Why Hebel® systems are a better way to design and build	1
1. Design and selection detail	
1.1 Applications overview	5
1.2 Intertenancy Wall <i>concealed water services one side</i>	6
1.3 Intertenancy Wall <i>concealed water services both sides</i>	7
1.4 Intertenancy Wall <i>large concealed water services both sides</i>	8
1.5 Corridor Wall <i>concealed water services one side</i>	9
1.6 Corridor Wall <i>concealed water services one side with furring channel</i>	10
1.7 Shaft Wall <i>adjacent to wet or common areas</i>	11
1.8 Shaft Wall <i>adjacent to dry habitable rooms</i>	12
1.9 Services Wall <i>for walls up 3.3 metres high</i>	13
1.10 Services Wall <i>for walls with 2 hour fire rating up to 4.65 metres high</i>	14
1.11 System components	15
2. System performance	
2.1 Acoustic performance	19
2.2 Fire rating performance	20
2.3 Structural performance	21
3. Installation detail	
3.1 Installation flowchart	22
3.2 Installation	24
3.3 Design & installation considerations	26
3.4 Coatings	27
3.5 Construction details overview	28
3.6 Construction details: FRL up to -/90/90	30
3.7 Construction details: FRL up to -/120/120	38
4. Handling, storage and responsibility	
4.1 Delivery and storage	41
4.2 Panel handling	42
4.3 Design, detailing and performance responsibilities	44
5. Appendix	
5.1 Appendix 1: Hebel PowerPanel material properties	45

WHY HEBEL® SYSTEMS ARE A BETTER WAY TO DESIGN AND BUILD



Whether you're a developer, architect, designer, builder or wall installer, Hebel wall systems deliver exceptional advantages in terms of quality, project efficiency, risk minimisation and cost and time certainty.

Creating high performance buildings using Hebel PowerPanel

At the heart of the Hebel internal wall systems is the Hebel PowerPanel, a 75mm thick steel reinforced masonry building panel made from autoclaved aerated concrete (AAC).

Developed and warranted by CSR, the Hebel PowerPanel can reduce heating and cooling loads on buildings, is non-combustible, can be produced to the size needed, is easily cut, makes construction fast and efficient, creates minimal waste and is a better choice for the environment compared with concrete or brick.

Using the 'solid wall' advantage in developments

There's a very good reason why Australia's largest apartment developers want Hebel wall systems. They can increase market potential and return for a minimal initial investment.

Hebel walls feel solid when you knock on them, can't be cut through with a knife and overall provide a quality long-term investment. And for builder / developers the benefits are doubled with fast construction and minimised risk.

Maximising floorspace

Hebel wall systems have been developed with floorspace in mind. The intertenancy wall system for concealed services on one side is one of the narrowest system on the market at just -185mm wide. This means greater design flexibility and more gross sellable floor space.

Benefiting from product versatility

The Hebel PowerPanel is used across the full range of internal wall systems - intertenancy, corridor, shaft and service walls – as well as balcony blades and facades. Each stage of a project benefits from this versatility – in design, estimating, procurement, delivery, handling, installation and certification.

This versatility also applies to wall heights and fire-rating levels. At its base system level the single mesh tongue and groove PowerPanel is suitable for applications with fire ratings up to 90 minutes for wall heights to 3.3 metres. When higher fire ratings

up to 2 hours for vertical wall heights up to 4.65 metres are needed, caged tongue and groove PowerPanel steps in.

Design efficiency, quality

Hebel wall systems cut through complexity in specifying internal walls. The systems are simple and only two types of plasterboard lining need to be considered for each system – standard or moisture resistant. This streamlines the design process and minimises the potential for error.

Further, system referencing and access to quality technical support is easy and efficient through the one reliable and trusted source, CSR Hebel.

Overall, the Hebel wall systems enable architects and designers to be confident in specifying a quality solution that's robust, proven, tested, fast and efficient to install and value-adding in terms of solidity and security.



Hebel PowerPanel single mesh tongue & groove profile



Hebel PowerPanel caged tongue & groove profile

Greater control over construction schedules and costs

Hebel internal walls systems go up quickly and easily which is why so many developers and construction companies rely on them to keep control of their project schedule and costs.

Builders are already ahead on their project when they specify Hebel systems. Delivery of the Hebel PowerPanels and installation of the Hebel wall leaves isn't held up waiting for windows to go in as wet or damp conditions don't affect the PowerPanel wall leaf installation.

Then there's the simplicity of the systems, which help maximise construction efficiency and minimise costs. For example:

- PowerPanels can be ordered to length for easy installation with minimal waste
- small number of material types reduces logistical complexity before and during construction
- the Hebel PowerPanel wall leaf is the fire-rated element making compliance easy
- the Hebel Service Panel provides a compliant, accurate pre-made machined panel, reducing on-site cutting and drilling
- plasterboard linings aren't required to go past the ceiling for NCC fire-rating compliance
- ceiling frames can be installed either before or after linings
- one trade can install the whole wall system.

Another significant speed and efficiency saving is in the installation of GPOs and dampers. The Hebel systems don't require fire-rated GPOs and dampers are connected to Hebel PowerPanel wall leaf only.

Constructing with Hebel internal wall systems means logistics are simple, the number of trades is minimised, work flows easily, project schedules are controlled, cost certainty is enhanced and risk is minimised.


Minimising risk

Hebel wall systems provide a solid foundation for risk minimisation in design and construction.

They are tested, well proven and designed to achieve NCC fire and acoustic rating compliance easily. Combining the non-combustible property of the Hebel PowerPanel with advanced system designs, CSR Hebel delivers high value cost effective solutions that significantly reduce the number of fire and acoustic risk points in construction.

Hebel Service Panel - improving compliance

Designed to the buildings specification, these pre-made machined service panels reduce on-site cutting and drilling. Because they are custom made, they are designed to meet each project's specific compliance requirements.

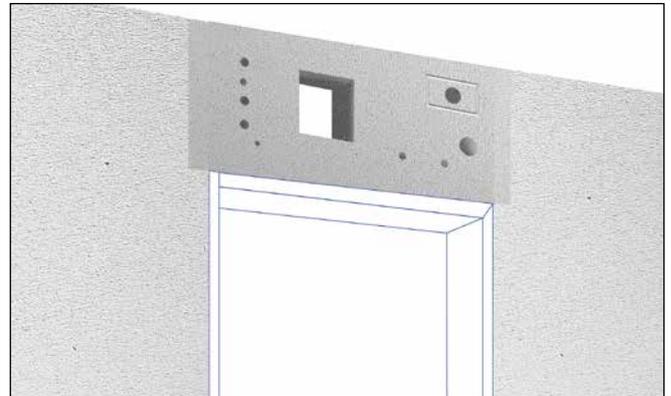


Gaining high sustainability values

Hebel AAC is a durable inert product, made from raw materials in a process that minimises embodied energy. The low bulk density of Hebel AAC means less than a quarter of the resources in raw materials are used in its production than for concrete and bricks.

Waste in production is reduced through extensive recycling. Production waste, slurry and even the condensation generated are all recycled back into the manufacturing process while waste steel and oil are recycled off site. On site the combination of panel sizes designed to suit standard building modules and the ease of working with standard power tools means there is very little waste. This goes a step further when panels are made-to-order.

Leveraging the exceptional value-add of Hebel systems

Quite simply Hebel internal wall systems deliver a holistic solution that no other systems can match. They benefit all stakeholders in the project lifecycle through their role in value-adding to the project's quality, design and construction efficiency, risk minimisation and cost and time certainty.

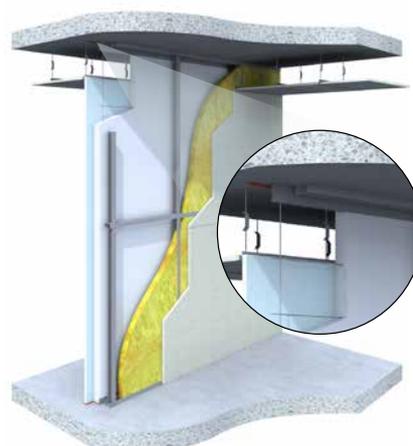

The Hebel Express Head system simplifies design and construction and minimises risk. The Hebel PowerPanel is installed from slab to soffit with only one fire sealant position required at head.


NEW HEBEL SERVICE PANEL

Made to spec. Ready to install

The Hebel Service Panel is our latest product innovation, a pre-made machined panel that meets compliance requirements and works seamlessly with the Hebel corridor wall system.

Designed to the buildings specification, these pre-made machined panels reduce on-site cutting and drilling. Because they are custom made, they are designed to meet each project's specific compliance requirements – improving the compliance reliability and build quality of multi-residential construction.

Take the versatility of Hebel's corridor wall systems to the next level with Hebel's Services Panel.

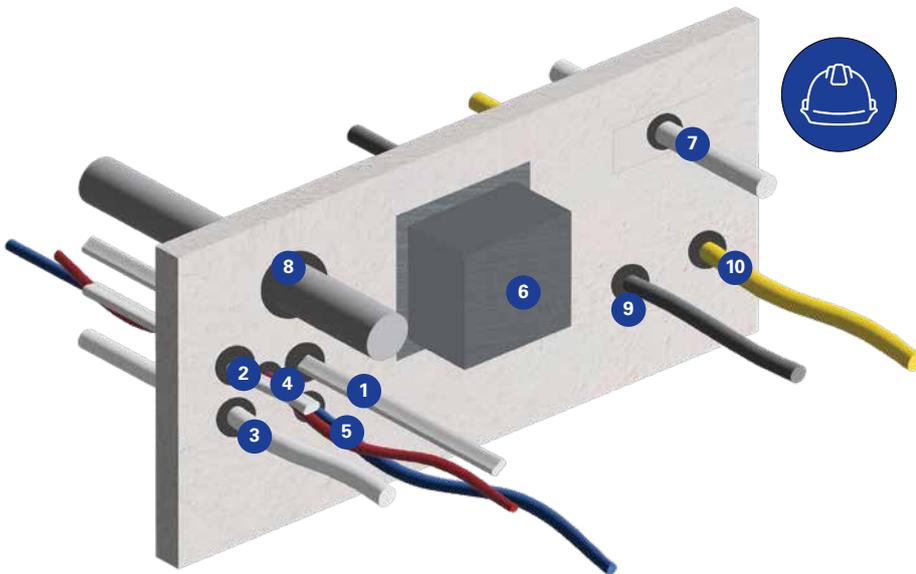

Corridor system

Works seamlessly with Hebel's corridor wall system providing an end-to-end solution.



Tailored to your specifications

Panels are pre-machined to project specifications through a highly accurate and consistent process.



Improves compliance

Penetration locations are cut as specified by the Fire Engineer and the panel is manufactured precisely to meet the required compliance codes.



Easy and fast to install


Delivered to site ready to install, there's no cutting or drilling required, resulting in less on-site preparation.

Panels are custom made to order. This is an example shows how easily services can be installed

ID	Service	Service size (mm)	Penetration size (mm)	Minimum distance to nearest service (mm)	Fire stopping
1	Master Antenna Television Cable (MATV)	32	35	50	
2	Electrical Power Cable (Electrical)	32	35	50	
3	Intercom Cable (Comms / Intercom)	32	35	50	
4	Emergency Warning and Intercommunication System Cable (EWIS)	7	16	50	
5	National Broadband Cable (NBN)	16	20	50	
6	Air Control System (Fire damper)	220 (SQ)	220 (SQ)	220	Riley damper
7	Fire Sprinkler System	50	85 x 200 (SQ)	200	
8	Refrigerant Copper Piping		85	100	
9	Cold Water Piping	20	32	50	
10	Natural Gas Piping	20	32	50	

If you are installing Hebel corridor walls, contact us now to discuss Hebel Service Panels for your next project. Phone 1300 712 896.

1.1 APPLICATIONS OVERVIEW

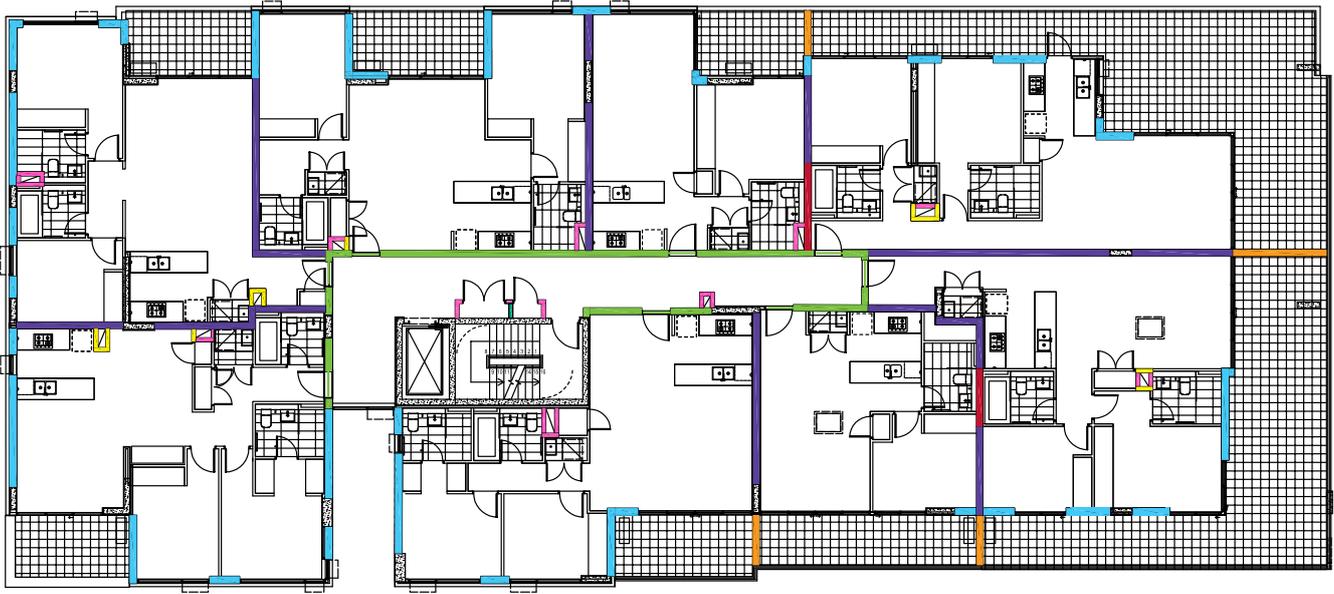

Intertency wall - dry to dry / wet

Designed for concealed services on one side using lightweight steel-reinforced PowerPanel, these Hebel Intertency Wall Systems provide a solid secure wall that maximises floor space, minimises costs and risks and delivers long-term value.



Shaft wall - wet areas

Hebel Shaft Wall Systems are designed for general partitions between service shafts and wet areas or shafts adjacent to common areas. Constructed with Hebel PowerPanel to maximise floor space and minimise risks and costs.



Intertency wall - dry / wet to dry / wet

These Hebel Intertency Wall Systems are the ideal solution where there are concealed services on both sides including large services applications such as shower mixers in both apartments. This quality solution using solid and secure PowerPanel maximises floor space and minimises risks and costs.



Service wall - plant rooms

Single mesh or caged Hebel PowerPanel is used in the Hebel Service Wall Systems to isolate and secure plant rooms from other areas of the building. For tall shaft risers with fire ratings up to 2 hours, PowerPanel can be installed horizontally. Solid and secure, these systems maximise floor space and minimise costs and risks.



Corridor wall and Hebel Service Panel

Hebel Corridor Wall Systems maximise floor space and provide a solid secure wall for services located on one side between common areas and apartments. Hebel's Service Panel integrates into the system for the fast installation of services and improved compliance.



Balcony Blade

Hebel PowerPanel is used for separating walls between balconies of different sole occupancy units. Refer to High Rise Facades Design & Installation Guide.



Shaft wall - dry areas

Robust and proven Hebel Shaft Wall Systems provide a solid, secure wall with a narrow width around service shafts to dry habitable areas and between scissor stairs. Uses Hebel PowerPanel to maximise space utilisation and minimise risks and costs in high rise and multi-residential construction.




External facade wall

Hebel PowerPanel is used for external façade walls with hidden or visible beams. This lightweight product provides substantial cost savings compared to traditional masonry. Refer to High Rise Facades Design & Installation Guide.



1.2 INTERTENANCY WALL

concealed water services one side

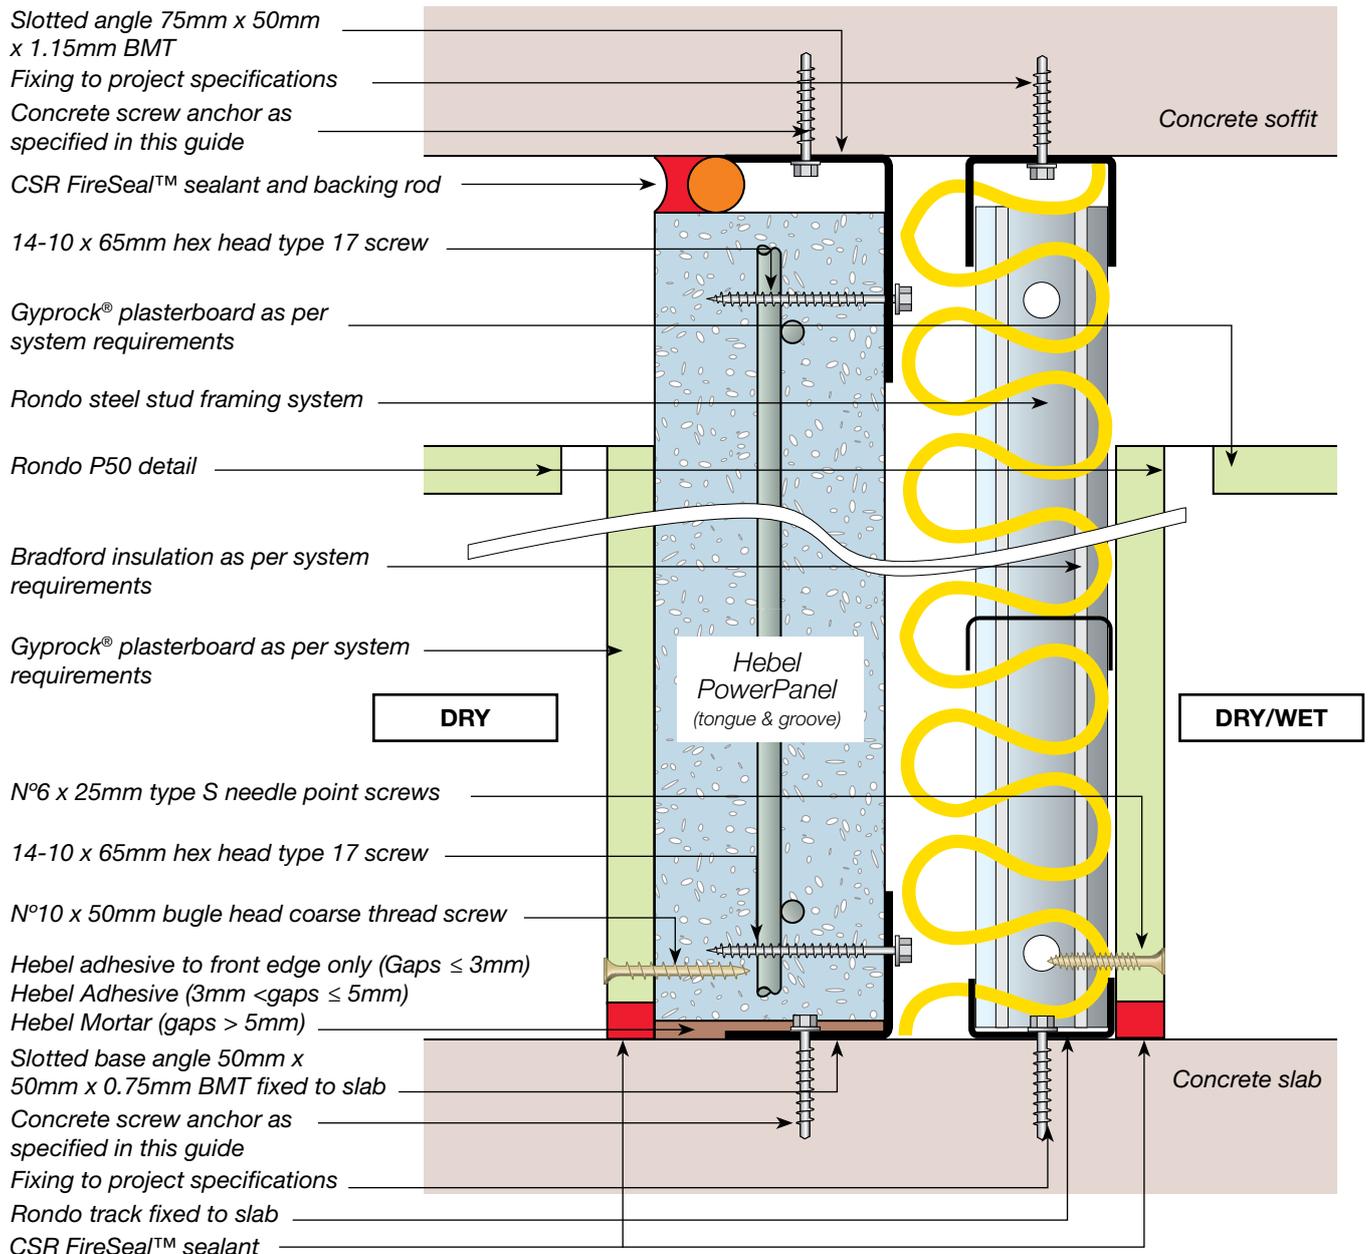

System	Application	FRL ^(A)	Wall linings ^(D)	Cavity width (mm)	Insulation	Acoustic rating Rw+Ctr ^(C)	Wall width (mm)
CSR21070	Dry to Dry	-/90/90 for wall heights up to 3.3m	Both Sides 13mm Gyprock Standard	20	75mm Bradford Acoustigard 11	50	185
CSR21071	Dry to Wet		Hebel Side – 13mm Gyprock Standard Stud Side – 13mm Aquachek ^(B)			50	185

NOTES:

(A) For wall heights higher than 3.3m, caged tongue & groove PowerPanel can be used and will achieve a FRL of -/120/120 for wall heights up to 4.65m (vertically). Also see Construction details section.

(B) 13mm Aquachek can be replaced by 9mm FC Sheeting and achieve the same Acoustic & Fire Rating Levels.

(C) Rw+Ctr values are based on acoustic opinion 20210103.7/1608A/R2/TB provided by Acoustic Logic Consultancy Pty Ltd.

(D) The minimum mass of plasterboard must be 8.5kg/m².


GENERAL NOTES:

- Intertenancy wall systems 21070-21071 meet NCC deemed-to-satisfy discontinuous construction requirements.
- CSR21070-21071 are designed to resist a maximum ultimate internal wind pressure of 0.375kPa. Contact Hebel Technical Services if internal wind pressures exceed 0.375kPa.



1.3 INTERTENANCY WALL

concealed water services both sides

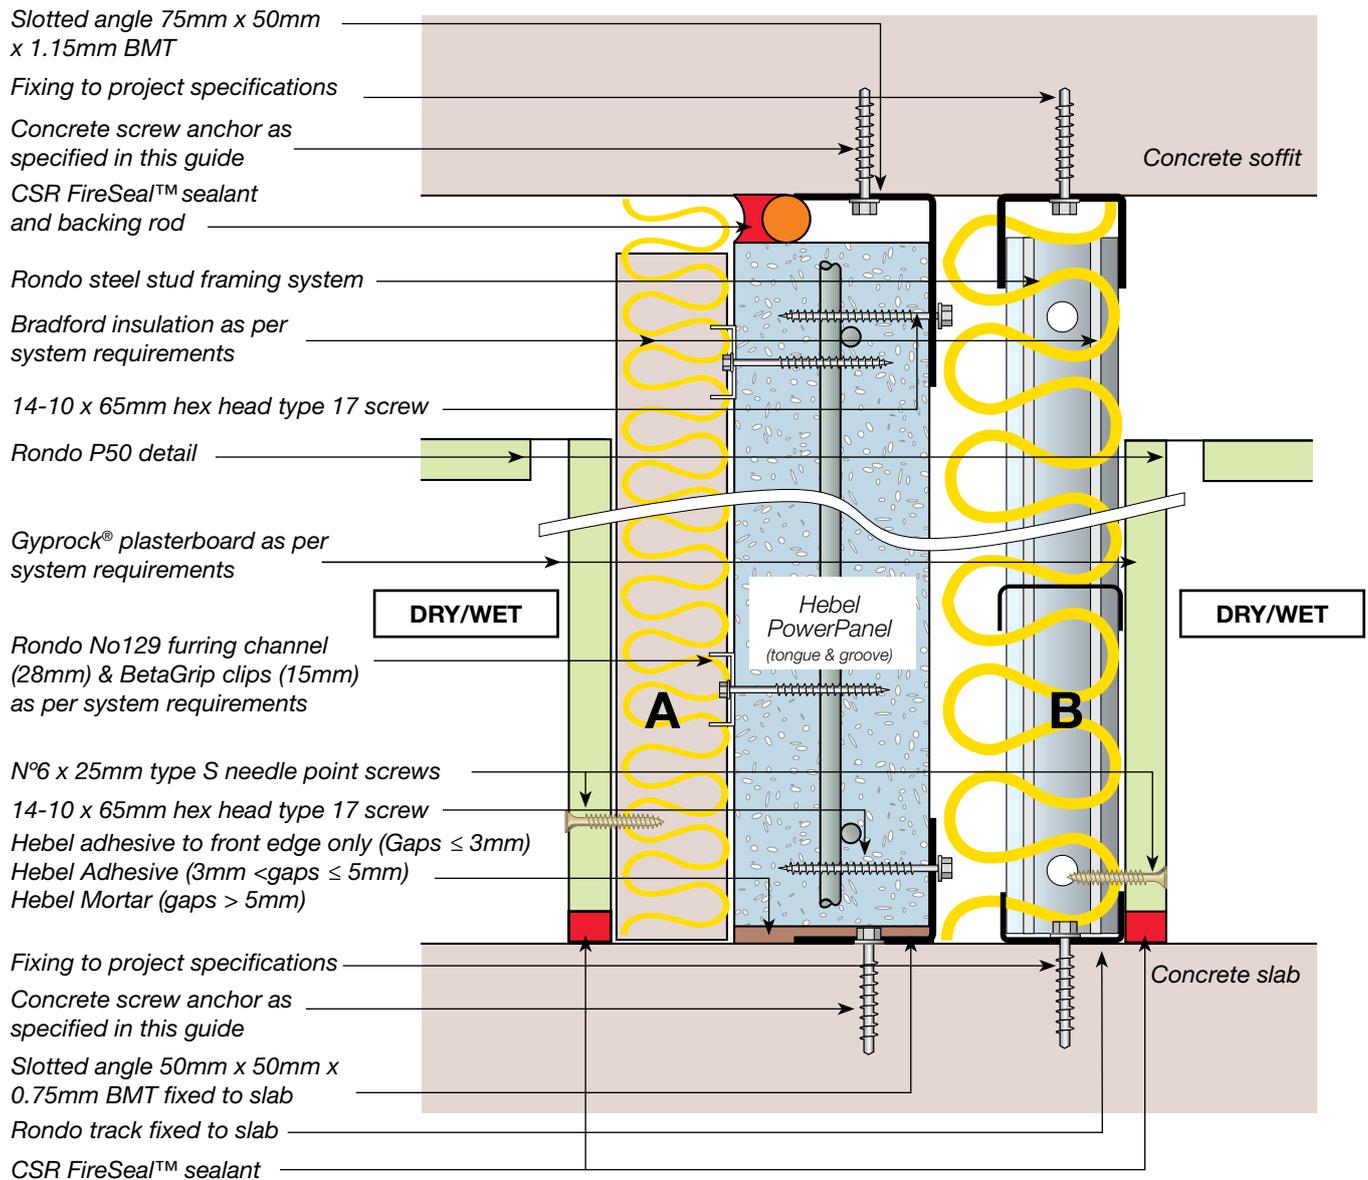

System	Application	FRL (A)	Wall linings (D)	Insulation A	Cavity width (mm)	Insulation B	Acoustic rating Rw+Ctr (C)	Wall width (mm)
CSR21072	Dry to Dry	-/90/90 for wall heights up to 3.3m	Both Sides 13mm Gyprock Standard	50mm Bradford Acoustigard 14	35	75mm Bradford Acoustigard 11	50	243
CSR21073	Dry to Wet		Dry Side – 13mm Gyprock Standard Wet Side – 13mm Aquachek (B)		20		50	228
CSR21074	Wet to Wet		Both Sides 13mm Aquachek (B)		50		228	

NOTES:

(A) For wall heights higher than 3.3m, caged tongue & groove PowerPanel can be used and will achieve a FRL of -/120/120 for wall heights up to 4.65m (vertically). Also see Construction details section.

(B) 13mm Aquachek can be replaced by 9mm FC Sheeting and achieve the same Acoustic & Fire Rating Levels.

(C) Rw+Ctr values are based on acoustic opinion 20210103.7/1608A/R2/TB provided by Acoustic Logic Consultancy Pty Ltd.

(D) The minimum mass of plasterboard must be 8.5kg/m².


GENERAL NOTES:

- Intertenancy wall systems CSR21072-21074 meet NCC deemed-to-satisfy discontinuous construction requirements.
- CSR21072-21074 are designed to resist a maximum ultimate internal wind pressure of 0.375kPa. Contact Hebel Technical Services if internal wind pressures exceed 0.375kPa.



1.4 INTERTENANCY WALL

large concealed water services both sides

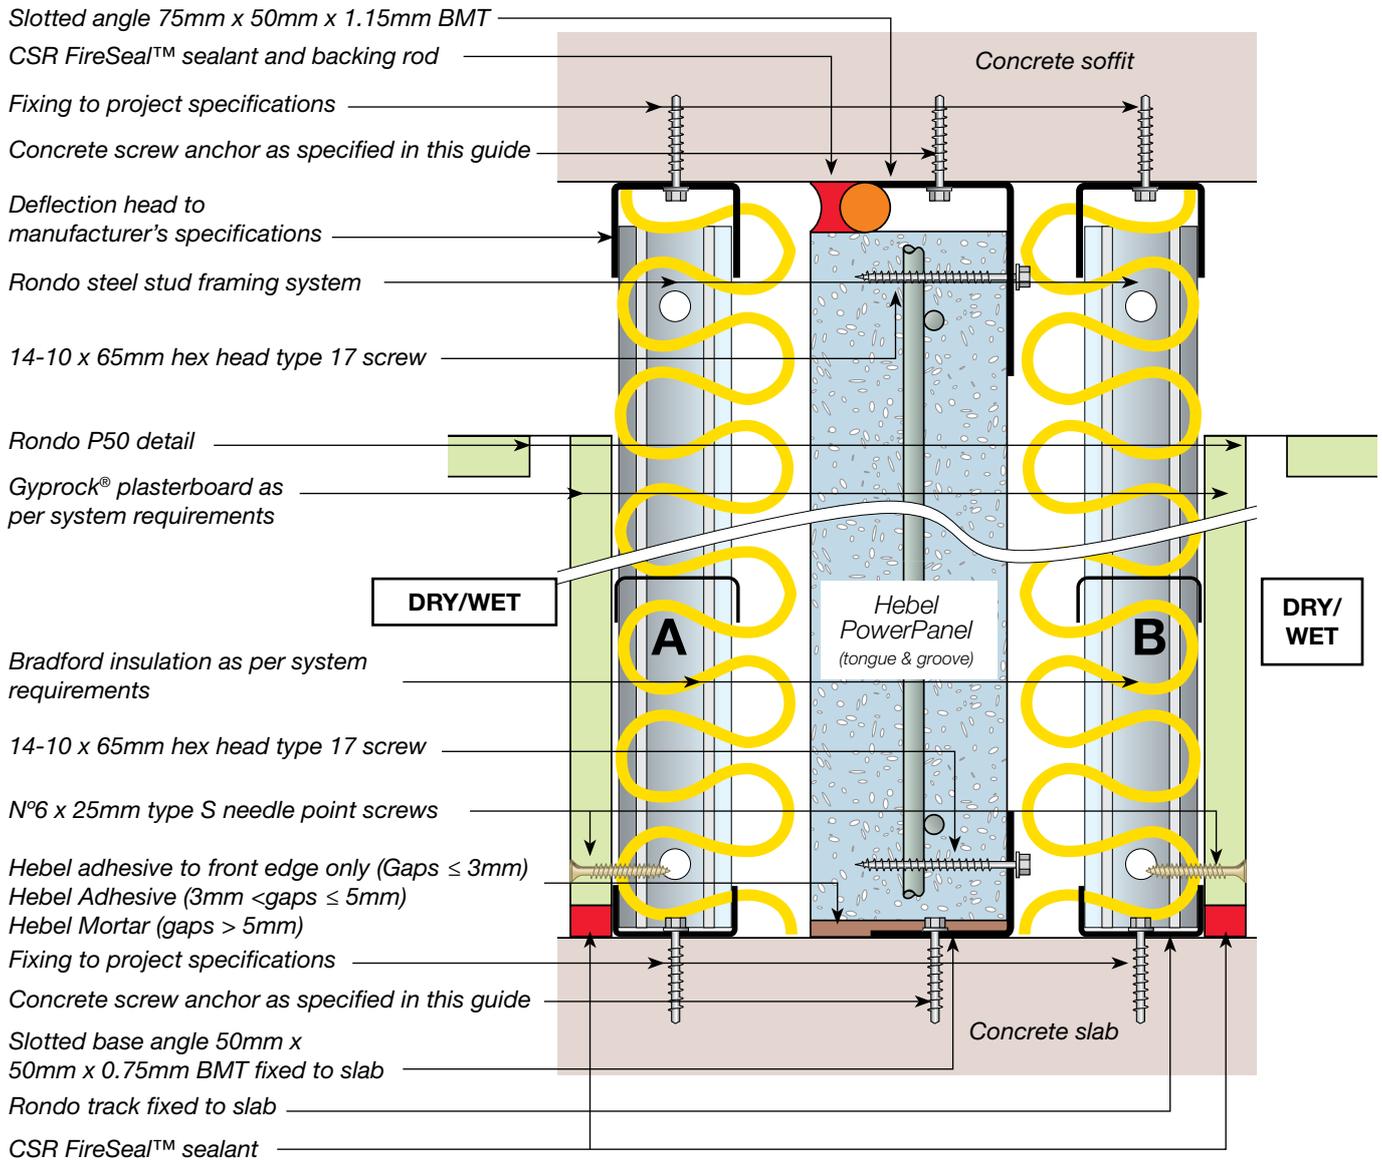

System	Application	FRL ^(A)	Wall linings ^(D)	Insulation A	Cavity width (mm)	Insulation B	Acoustic rating Rw+Ctr ^(C)	Wall width (mm)
CSR21075	Dry to Dry	-90/90 for wall heights up to 3.3m	Both Sides 13mm Gyprock Standard	50mm Bradford Acoustigard	20	75mm Bradford Acoustigard	53	269
CSR21076	Dry to Wet		Dry Side – 13mm Gyprock Standard Wet Side – 13mm Aquachek ^(B)	14 or 75mm Bradford Acoustigard		11 or 50mm Bradford Acoustigard	53	269
CSR21077	Wet to Wet		Both Sides 13mm Aquachek ^(B)	11		14	54	269

NOTES:

- (A) For wall heights higher than 3.3m, caged tongue & groove PowerPanel can be used and will achieve a FRL of -/120/120 for wall heights up to 4.65m (vertically). Also see Construction details section.
- (B) 13mm Aquachek can be replaced by 9mm FC Sheeting and achieve the same Acoustic & Fire Rating Levels.
- (C) Rw+Ctr values are based on acoustic opinion 20210103.7/1608A/R2/TB provided by Acoustic Logic Consultancy Pty Ltd.
- (D) The minimum mass of plasterboard must be 8.5kg/m².


GENERAL NOTES:

- 1. Intertency wall systems CSR21075-21077 meet NCC deemed-to-satisfy discontinuous construction requirements.
- 2. CSR21075-21077 are designed to resist a maximum ultimate internal wind pressure of 0.375Pa. Contact Hebel Technical Services if internal wind pressures exceed 0.375kPa.



1.5 CORRIDOR WALL

concealed water services one side

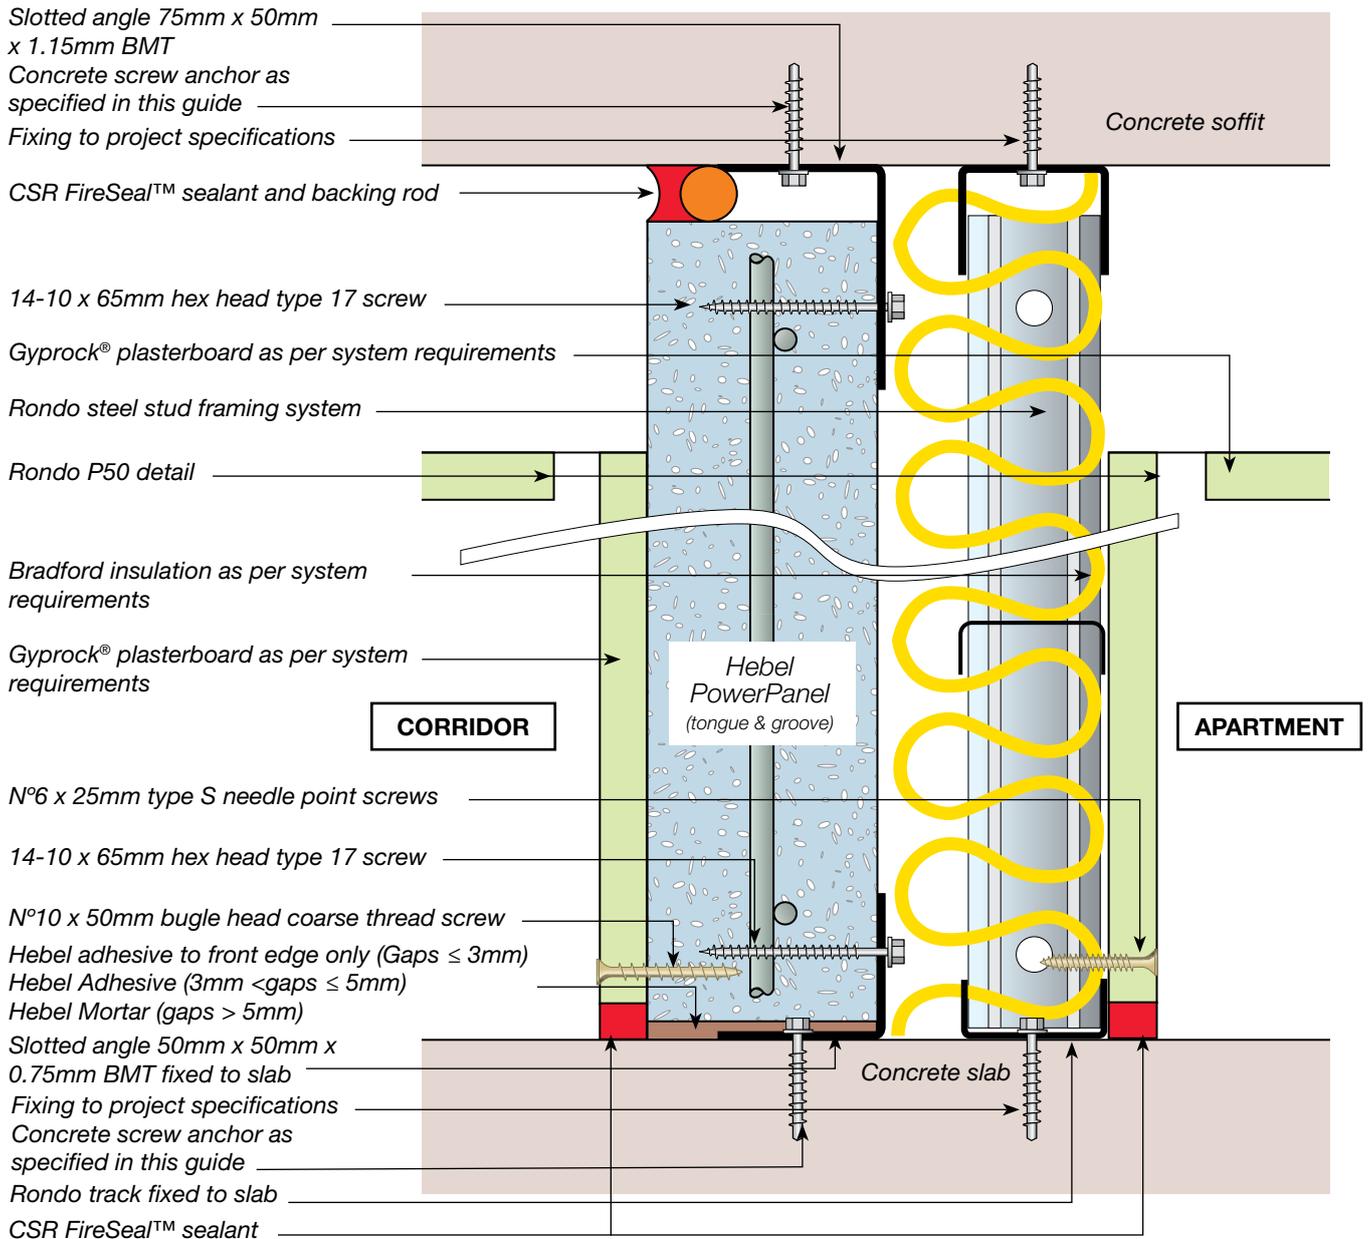

System	Application	FRL ^(A)	Wall linings ^(D)	Cavity width (mm)	Insulation	Acoustic rating R_w ^(C)	Wall width (mm)
CSR21148	Dry to Dry	-/90/90 for wall heights up to 3.3m	Both Sides 13mm Gyprock Standard	15	50mm Bradford Acoustigard 14	58	180
CSR21149	Dry to Wet		Corridor Side – 13mm Gyprock Standard Stud Side – 13mm Aquachek ^(B)			59	180

NOTES:

(A) For wall heights higher than 3.3m, caged tongue & groove PowerPanel can be used and will achieve a FRL of -/120/120 for wall heights up to 4.65m (vertically). Also see Construction details section.

(B) 13mm Aquachek can be replaced by 9mm FC Sheeting and achieve the same Acoustic & Fire Rating Levels.

(C) R_w values are based on acoustic opinion 20210103.7/1608A/R2/TB provided by Acoustic Logic Consultancy Pty Ltd.

(D) The minimum mass of plasterboard must be 8.5kg/m².


GENERAL NOTES:

1. CSR21148-21149 are designed to resist a maximum ultimate internal wind pressure of 0.375kPa. Contact Hebel Technical Services if internal wind pressures exceed 0.375kPa.



1.6 CORRIDOR WALL

concealed water services one side with furring channel

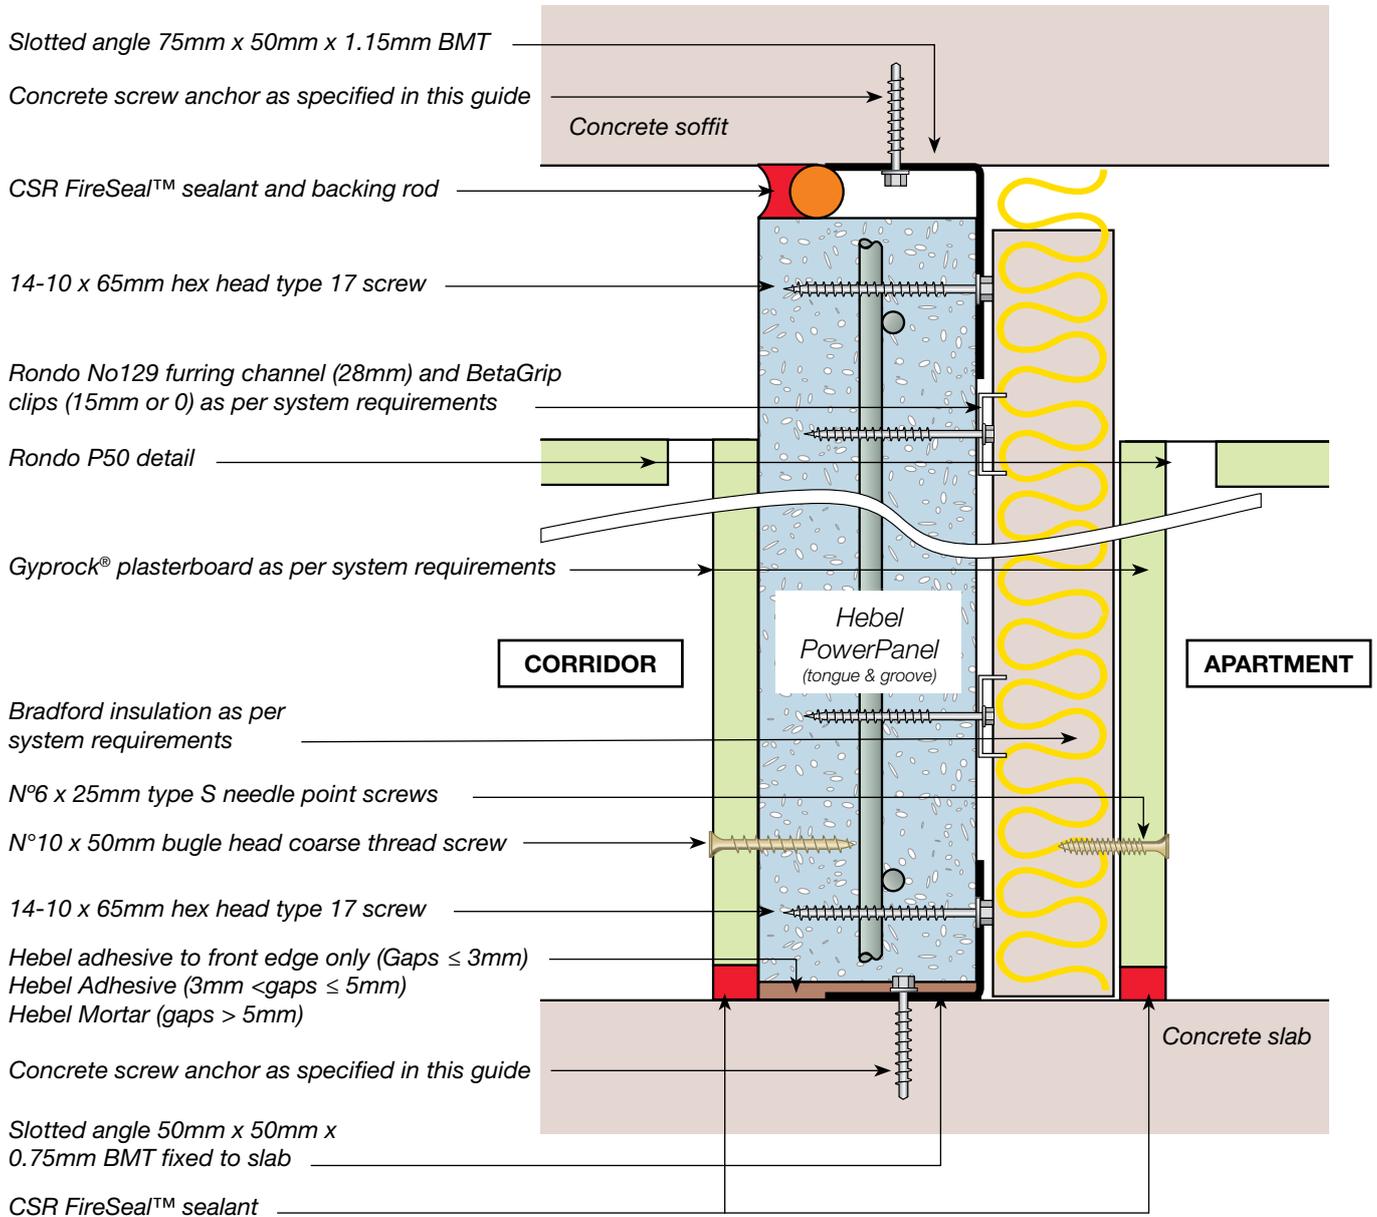

System	Application	FRL ^(A)	Wall linings ^(D)	Cavity width (mm)	Insulation	Acoustic rating R _w ^(C)	Wall width (mm)
CSR21150	Dry to Dry	-/90/90 for wall heights up to 3.3m	Both Sides 13mm Gyprock Standard	43	50mm Bradford Acoustigard 14	52	144
CSR21151	Dry to Wet		Corridor Side – 13mm Gyprock Standard Stud Side – 13mm Aquachek ^(B)			53	144

NOTES:

(A) For wall heights higher than 3.3m, caged tongue & groove PowerPanel can be used and will achieve a FRL of -/120/120 for wall heights up to 4.65m (vertically). Also see Construction details section.

(B) 13mm Aquachek can be replaced by 9mm FC Sheeting and achieve the same Acoustic & Fire Rating Levels.

(C) R_w values are based on acoustic opinion 20210103.7/1608A/R2/TB provided by Acoustic Logic Consultancy Pty Ltd.

(D) The minimum mass of plasterboard must be 8.5kg/m².


GENERAL NOTES:

1. CSR21150-21151 are designed to resist a maximum ultimate internal wind pressure of 0.375kPa. Contact Hebel Technical Services if internal wind pressures exceed 0.375kPa.



1.7 SHAFT WALL

adjacent to wet or common areas

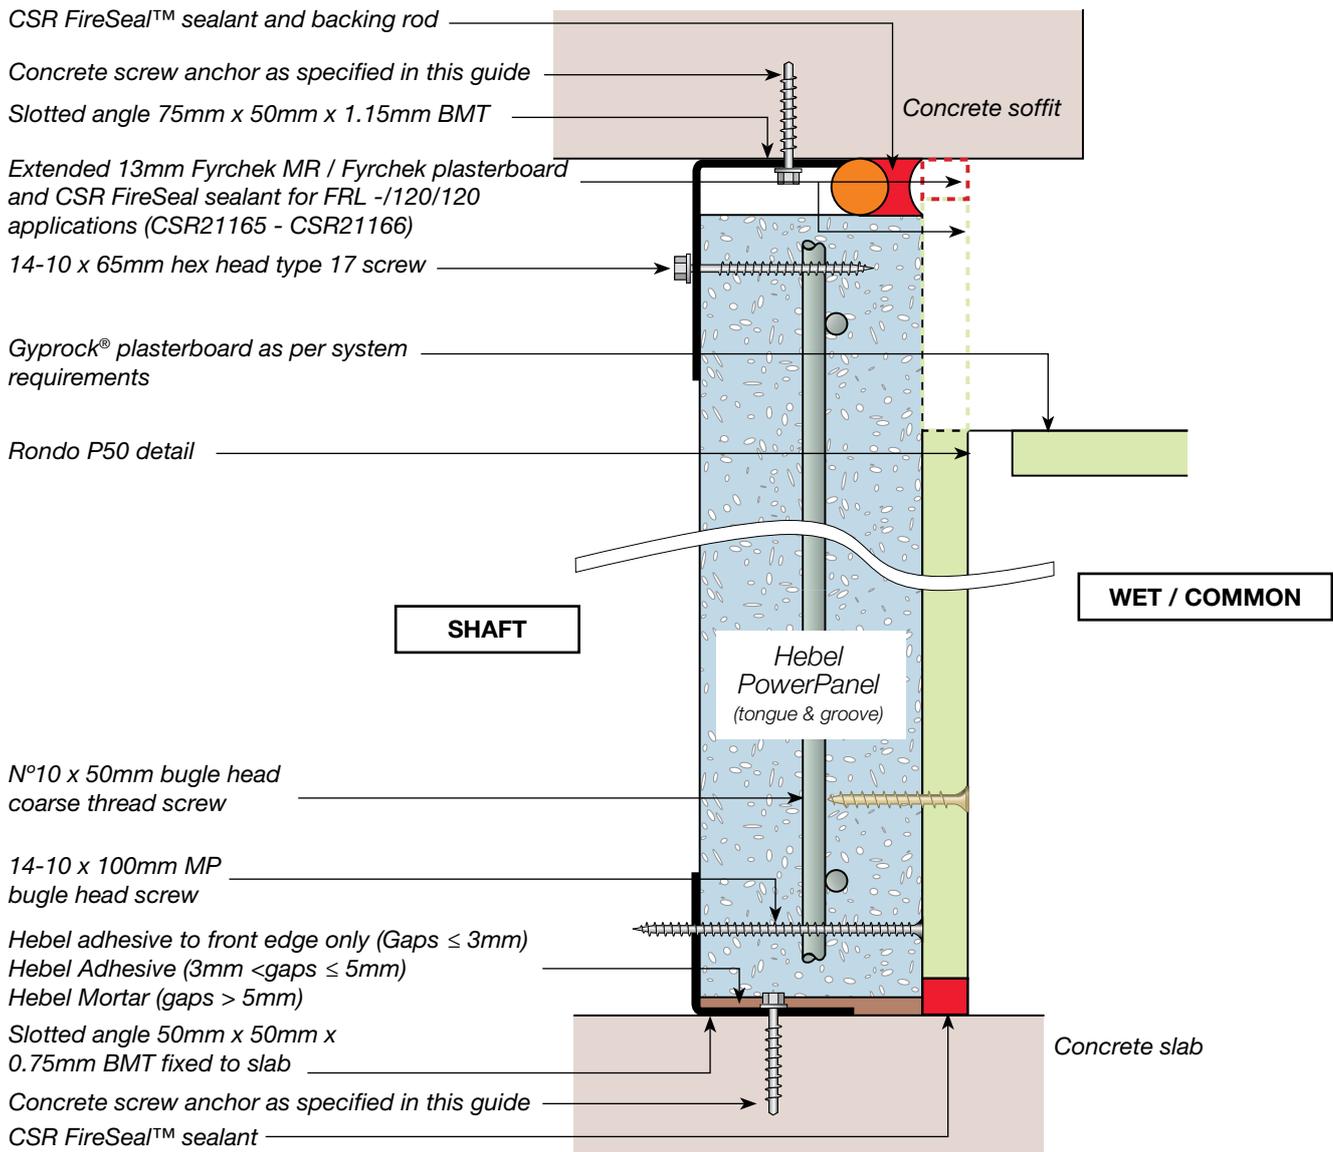

System	Application	FRL ^{(A),(B)}	Wall linings ^(E)	Acoustic rating Rw+Ctr ^(D)	Wall width (mm)
CSR21163	Shaft to Wet	-/90/90 for wall heights up to 3.3m	13mm Aquachek ^(C)	34	88
CSR21164	Shaft to Common		13mm Gyprock Standard	33	88
CSR21165	Shaft to Wet	-/120/120 for wall heights up to 3.3m	13mm Fyrchek MR	34	88
CSR21166	Shaft to Common		13mm Fyrechek	34	88

NOTES:

- (A) To achieve an FRL of -/120/120 for wall heights up to 3.3m use 13mm Fyrchek, or Fyrchek MR plasterboard direct fixed to the Hebel panels and extended to the concrete soffit as shown. CSR FireSeal sealant joints required to all perimeters of the plasterboard .
- (B) For wall heights higher than 3.3m, caged tongue & groove PowerPanel can be used and will achieve a FRL of -/120/120 for wall heights up to 4.65m (vertically). Also see Construction details section.
- (C) 13mm Aquachek can be replaced by 9mm FC Sheeting and achieve the same Acoustic & Fire Rating Levels.
- (D) Rw+Ctr values are based on acoustic opinion 20210103.7/1608A/R2/TB provided by Acoustic Logic Consultancy Pty Ltd.
- (E) The minimum mass of plasterboard must be 8.5kg/m².


GENERAL NOTES:

- 1. CSR21163-21166 are designed to resist a maximum ultimate internal wind pressure of 0.375kPa. Contact Hebel Technical Services if internal wind pressures exceed 0.375kPa.



1.8 SHAFT WALL

adjacent to dry habitable rooms

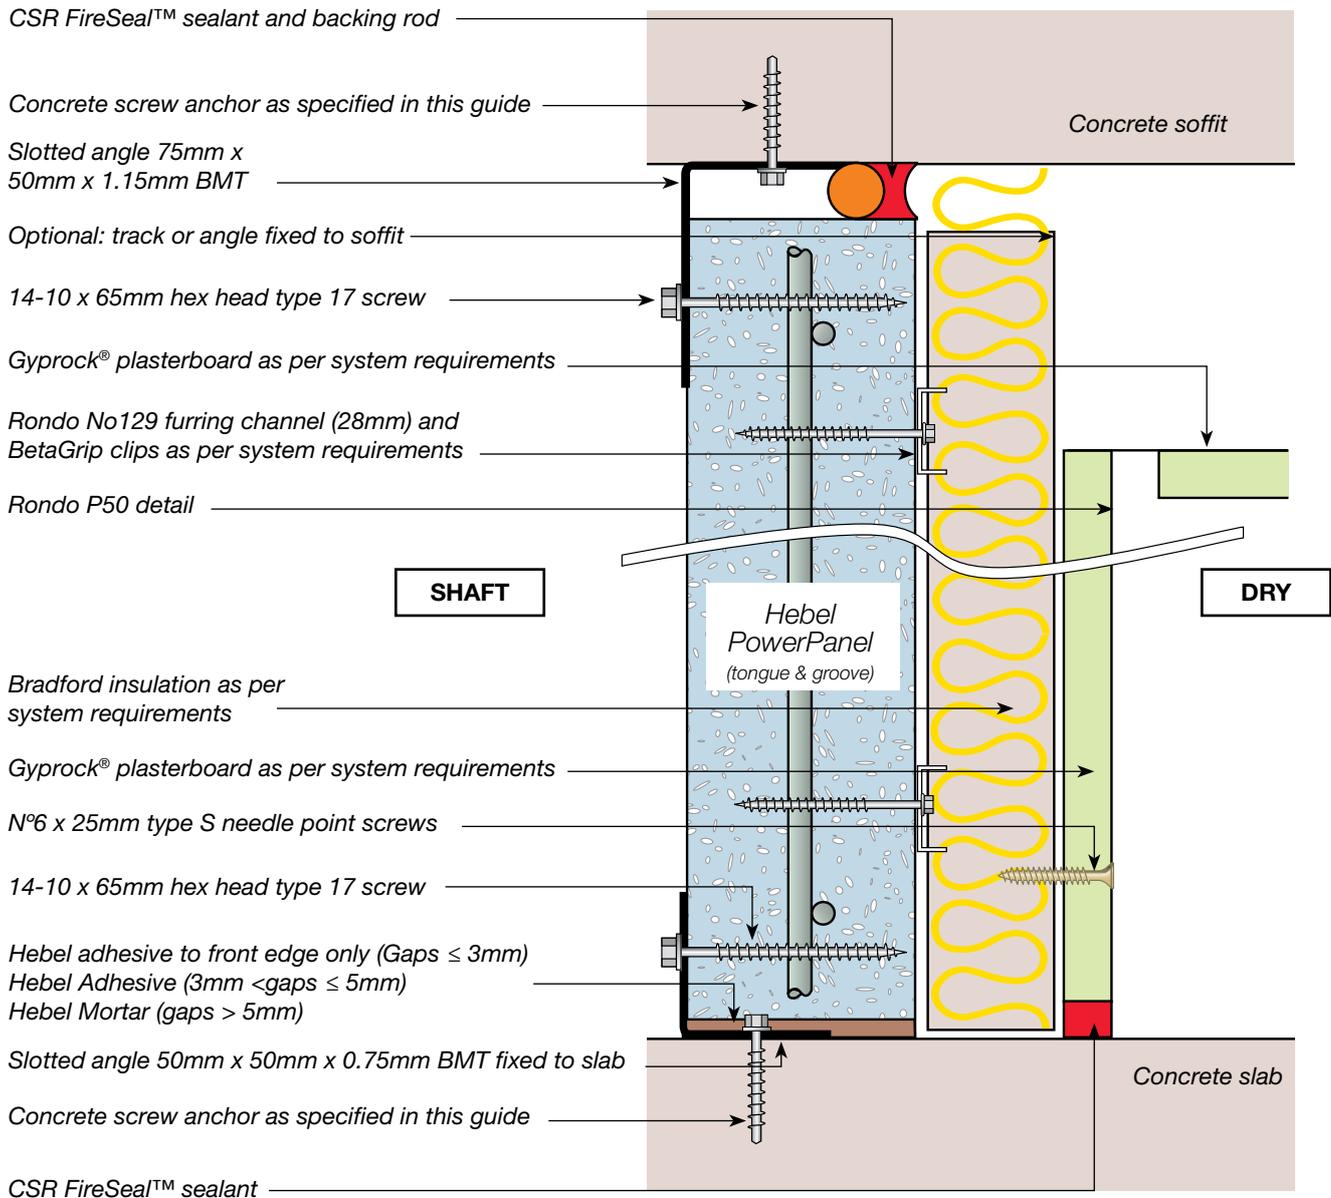

System	Application	FRL ^(A)	Wall linings ^(D)	Cavity width (mm)	Insulation	Acoustic rating Rw+Ctr ^(C)	Acoustic rating Rw ^(C)	Wall width (mm)
CSR21160	Shaft to Dry	-/90/90 for wall heights up to 3.3m	13mm Gyprock Standard	43	50mm Bradford Acoustigard 14	40	50	131
CSR21162	Shaft to Wet		13mm Aquachek ^(B)	28	NIL	36	42	116

NOTES:

(A) For wall heights higher than 3.3m, caged tongue & groove PowerPanel can be used and will achieve a FRL of -/120/120 for wall heights up to 4.65m (vertically). Also see Construction details section.

(B) 13mm Aquachek can be replaced by 9mm FC Sheeting and achieve the same Acoustic & Fire Rating Levels.

(C) Rw+Ctr and Rw values are based on acoustic opinion 20210103.7/1608A/R2/TB provided by Acoustic Logic Consultancy Pty Ltd.

(D) The minimum mass of plasterboard must be 8.5kg/m².


GENERAL NOTES:

1. CSR21160 & CSR21162 are designed to resist a maximum ultimate internal wind pressure of 0.375kPa. Contact Hebel Technical Services if internal wind pressures exceed 0.375kPa.



1.9 SERVICES WALL

for walls up 3.3 metres high

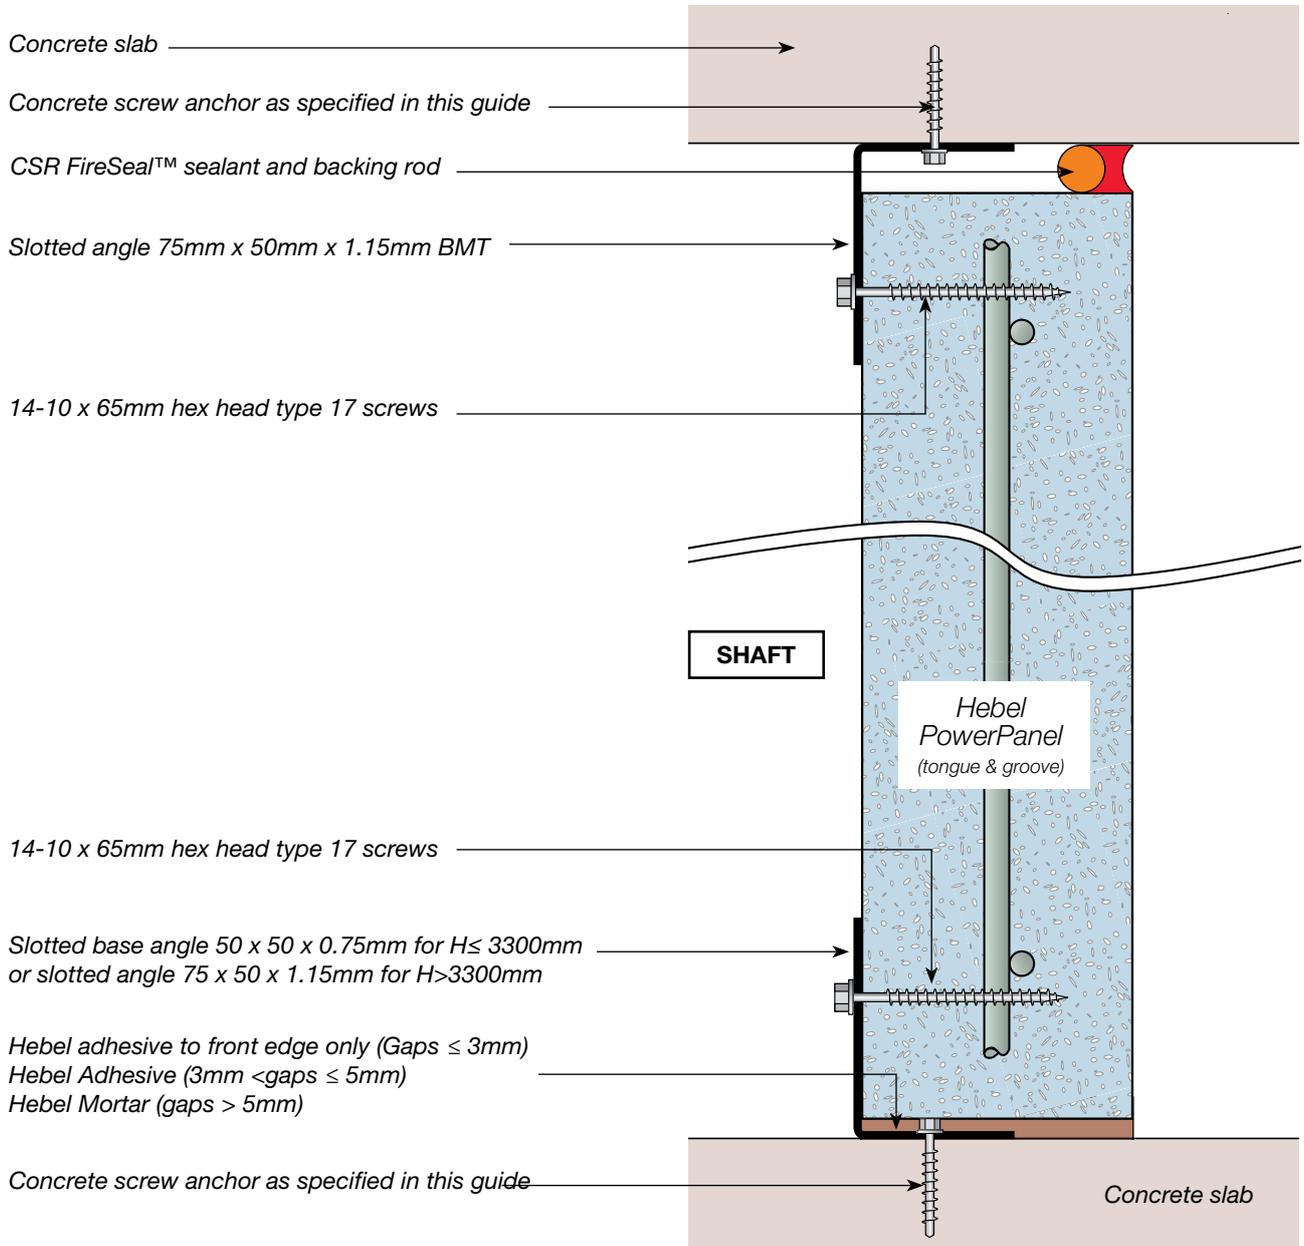

Code	Application	FRL ^(A)	Wall linings	Hebel component	Acoustic rating Rw ^(B)	Wall width (mm)	Paint finish
CSR21169	Bare Shaft	-/90/90 for wall heights up to 3.3m	Nil	75mm PowerPanel T&G	33	75	Optional

NOTES:

(A) Also see Construction details section.

(B) Rw values are based on acoustic opinion 2010861.3/1506A/R0/GW provided by Acoustic Logic Consultancy Pty Ltd.


GENERAL NOTES:

1. CSR21169 is designed to resist a maximum ultimate internal wind pressure of 0.375kPa. Contact Hebel Technical Services if internal wind pressures exceed 0.375kPa.



1.10 SERVICES WALL

for walls with 2 hour fire rating up to 4.65 metres high

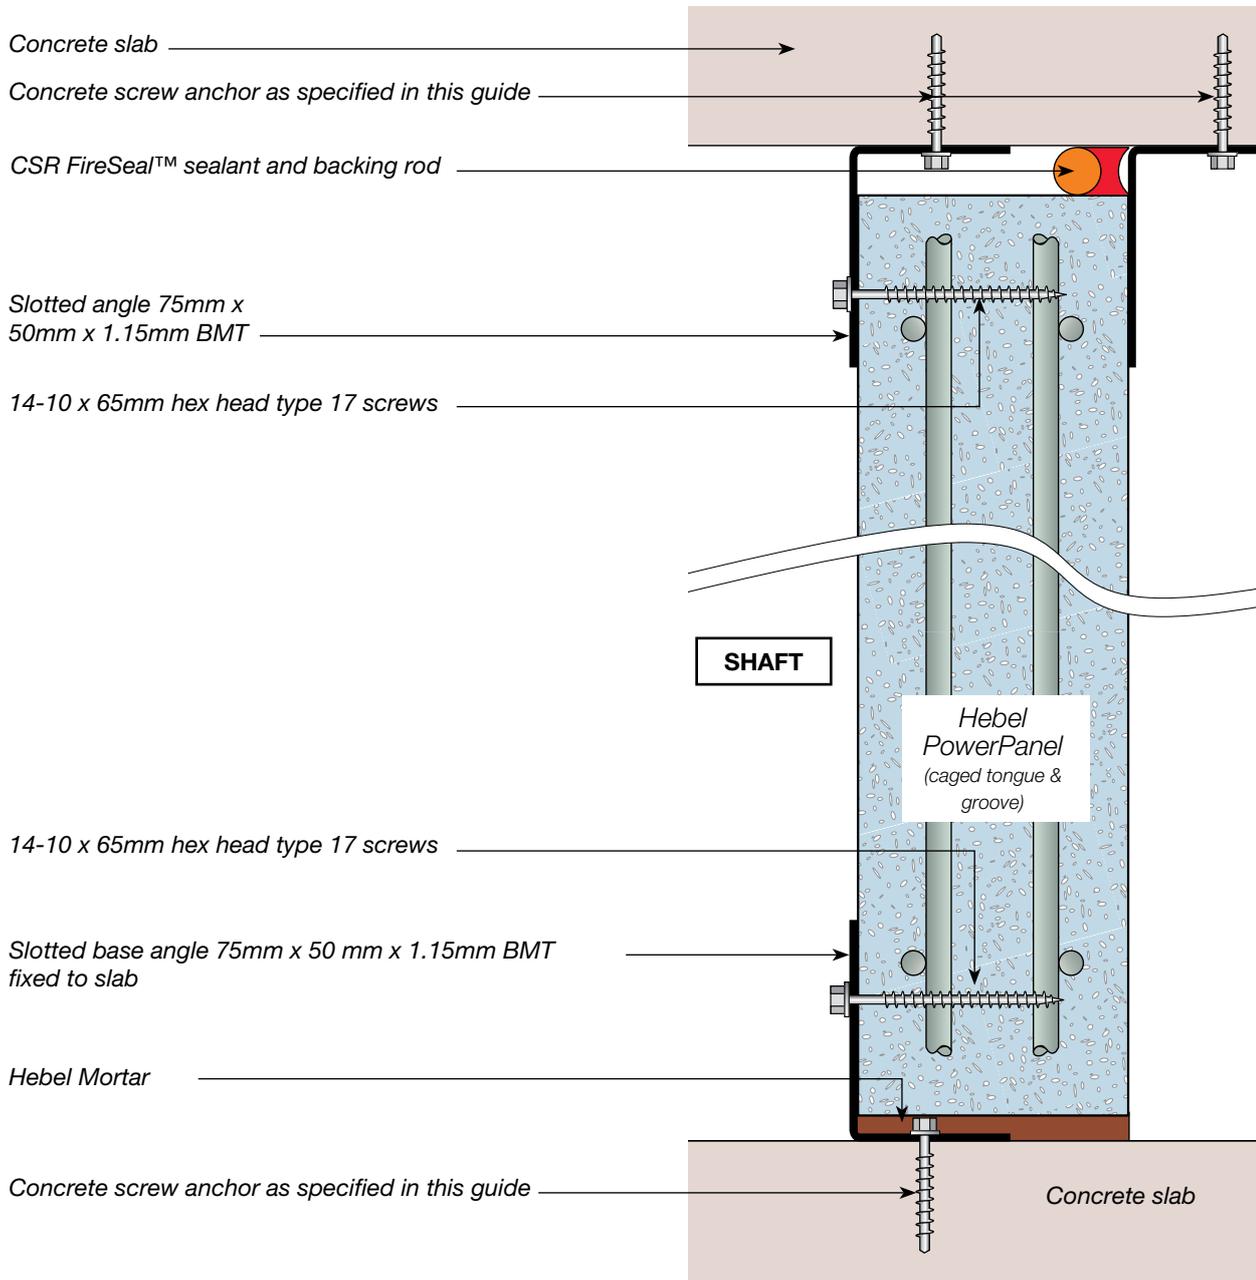

Code	Application	FRL ^(A)	Wall linings	Hebel component	Acoustic rating Rw ^(B)	Wall width (mm)	Paint finish
CSR21159	Bare Shaft	-/120/120 for wall heights up to 4.65m	Nil	75mm caged T&G PowerPanel	33	75	Optional

NOTES:

(A) Also see Construction details section.

(B) Rw values are based on acoustic opinion 2010861.3/1506A/R0/GW provided by Acoustic Logic Consultancy Pty Ltd.

GENERAL NOTES:

1. CSR21159 is designed to resist a maximum ultimate internal wind pressure of 0.375 kPa. Contact Hebel Technical Services if internal wind pressures exceed 0.375kPa.

1.11 SYSTEM COMPONENTS

HEBEL POWERPANEL

The primary component of Hebel internal wall systems is the 75mm Hebel PowerPanel which is manufactured in a range of standard and made-to-length sizes as indicated in Table 1.11.1. The standard panel is produced as a stock item. Made-to-length is subject to production lead times.

Table 1.11.1 Hebel PowerPanel tongue & groove 75mm standard and made-to-length sizes

	Profile	Reinforcement	Fire rating level	Length mm	Width mm	Ult. wind load kPa	Weight kg/m ²
Standard sizes (stock)	Tongue & groove	Single mesh	-/90/90	2700	600	0.375	49
				2800	600	0.375	49
				2850	600	0.375	49
				2900	600	0.375	49
				3000	600	0.375	49
				3300	600	0.375	49
		Caged mesh	-/120/120	3600	600	0.375	53
				4200	600	0.375	53
Made-to-length sizes (5mm increments)	Tongue & groove	Single mesh	-/90/90	up to 3300	600	0.375	49
		Caged mesh	-/120/120	up to 4800	300-600	0.375	53

Notes: Average panel weight calculated 30% moisture content ^Panels over 3300mm use caged mesh.

Hebel recommends that the following components or equivalent be used:


Table 1.11.2 Typical Hebel intertenancy and corridor wall components

Wall components	Intertenancy walls Max. floor space, concealed services one side only	Intertenancy walls Max. floor space, concealed services both sides	Intertenancy walls Large concealed services both sides	Corridor walls Max. floor space, concealed services one side only	Corridor walls Max. floor space, concealed services one side, with furring channel
Hebel PowerPanel tongue & groove single or caged mesh	✓	✓	✓	✓	✓
Hebel Service Panel - Made to order				✓	✓
Slotted head, base and vertical angle (75mm x 50mm x 1.15mm BMT)	✓	✓	✓	✓	✓
Slotted base angle (60mm x 50mm x 0.75mm BMT)	✓	✓	✓	✓	✓
Furring channel		✓			✓
Steel stud framing	✓	✓	✓	✓	
Furring channel mounting clips		✓			✓
Gyprock® plasterboard	✓	✓	✓	✓	✓
Hebel Adhesive or Hebel Mortar	✓	✓	✓	✓	✓
Bradford insulation	✓	✓	✓	✓	✓
Fasteners / fixings	✓	✓	✓	✓	✓
CSR FireSeal™ fire and acoustic sealant	✓	✓	✓	✓	✓
Hebel Patch	✓	✓	✓	✓	✓
Hebel Anti-Corrosion Protection Paint	✓	✓	✓	✓	✓

Table 1.11.3 Typical Hebel shaft and service wall components

Wall components	Shaft walls General partitions on service shaft to wet areas or shafts adjacent to common areas	Shaft walls Max. floor space with concealed services one side	Services wall Separating walls to isolate and secure plants from other areas. FRL -/90/90 up to 3.3m	Services wall Separating walls to isolate and secure plants from other areas. FRL -/120/120 up to 4.65m	Horizontal Shaft wall
Hebel PowerPanel tongue & groove single or caged mesh	✓	✓	✓	✓	✓
Slotted head, base and vertical angle (75mm x 50mm x 1.15mm BMT)	✓	✓	✓	✓	✓
Slotted base angle (50 x 50 x 0.75mm for H≤3300mm) (75 x 50 x 1.15mm for H>3300mm)	✓	✓	✓	75 x 50 x 1.15mm only	75 x 50 x 1.15mm only
Furring channel		✓		Optional	Optional
Furring channel mounting clips		✓		Optional	Optional
Gyprock® plasterboard	✓	✓		Optional	Optional
Hebel Adhesive	✓	✓	✓	✓	✓
Hebel Mortar			✓	✓	✓
Hebel Patch	✓	✓	✓	✓	✓
Bradford insulation		✓			
Fasteners / fixings	✓	✓	✓	✓	✓
CSR FireSeal™ fire and acoustic sealant	✓	✓	✓	✓	✓
Hebel Anti-Corrosion Protection Paint	✓	✓	✓	✓	✓

Note: CSR has engineered and tested the PowerPanel system to comply with the National Construction Code (NCC) and relevant Australian Standards. It cannot guarantee products and accessories not specified and sold by CSR will perform to these standards. The Product Guarantee will only apply if all components used in the system are specified and sold by CSR or its agents

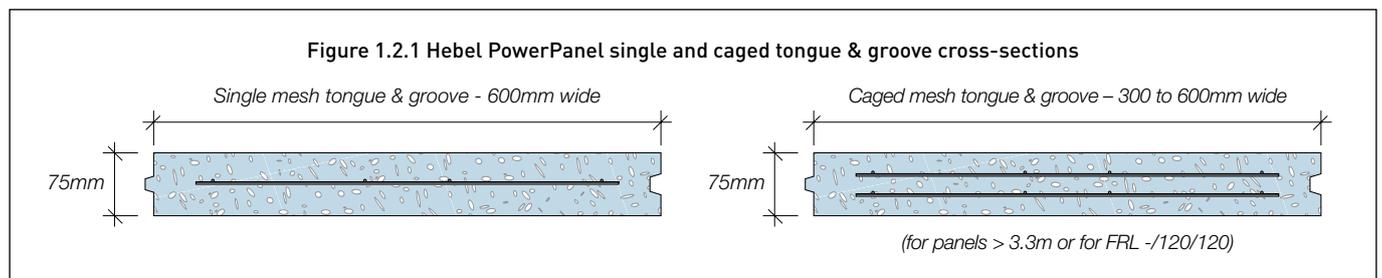

SLOTTED ANGLE CONNECTIONS

For positioning and restraining (with added screw fixings) the top and bottom of the panels.

- Head and side connections: 75 x 50 x 1.15mm BMT slotted galvanised steel angle (slots in both legs)



- Base connections: 50 x 50 x 0.75mm BMT galvanised steel angle for H ≤ 3000mm (-/90/90 FRL). 75 x 50 x 1.15mm BMT galvanised steel angle for H > 3000mm and/ or -/120/120 FRL.

All angles with BMT greater than 0.75mm will have to be slotted to allow penetration of fixings. Head connections require slotted angle to allow for deflection of slab above.

HEBEL ADHESIVE

Hebel Adhesive (supplied in 20kg bag) is used for bonding the panels together at vertical and horizontal joints or for gaps at base gaps ≤ 5mm.



HEBEL MORTAR

Hebel Mortar (supplied in 20kg bag) is used to provide a level base for panel installation as well as providing acoustic and fire protection at the base of the panels.

HEBEL PATCH

Minor chips or damage to panels are repaired using Hebel Patch (supplied in 10kg bag).

CSR FIRESEAL

To attain the specified FRL and/or R_w requirements, all perimeter gaps and penetrations must be carefully tooled and completely filled with CSR FireSeal installed to the manufacturer's specifications.

BACKING ROD

CSR Hebel recommends the use of an open cell polyurethane backing rod which ensures the correct depth of sealant is achieved. The backing rod provides a firm backing against which sealant can be tooled, and allows the sealant to bond on both sides of the joint to the Hebel substrate. The open cell backing facilitates faster curing time and is much more compressible, allowing use in a wider range of joints.

HEBEL ANTI-CORROSION PROTECTION PAINT

Reinforcement exposed when panels are cut must be coated with a liberal application of Hebel Anti-Corrosion Protection Paint.



FURRING CHANNEL MOUNTING CLIPS

Clips are proprietary components enabling the mounting of furring channel and plasterboard onto Hebel PowerPanel. This provides a cavity space which can change the acoustic insulation performance of the wall system. Clips used on Hebel intertenancy and corridor walls are:

- BetaGrip1 (BG01) clip.

STEEL STUD FRAMEWORK

Zinc coated steel studs, noggings, head and base tracks are used to create separated stud framework, which in conjunction with the Hebel PowerPanel, provides an asymmetric cavity wall assembly.

There are a number of different steel stud framework component manufacturers. All steel stud framework components are to be designed in accordance with manufacturer's specifications, and AS/NZS 4600.

FURRING CHANNEL

Rondo galvanised steel furring channels are mounted onto the BetaGrip clips. Furring channel used:

- Rondo N°129, 28 x 38 x 0.50mm, BMT channels.



BRADFORD GLASSWOOL

Manufactured in Australia Bradford Glasswool boards and blankets provide excellent fire resistance and acoustic performance properties for intertenancy, corridor and shaft walls. Bradford Glasswool products are manufactured by spinning molten glass, containing up to 65% recycled content, into fine wool like fibres. These are bonded together using a thermosetting resin and employ safe to handle FBS-1 biosoluble Glasswool formulation. Products meet AS/NZS 4859 requirements to ensure performance for the life of the building.

BRADFORD FIRESEAL™

The Bradford Fireseal range provides rockwool fire protection insulation products designed to meet the NCC fire requirements for intertenancy walls and is typically used in junctions of intertenancy and external brick walls. This range is made from biosoluble rockwool, an insulation material specially formulated to provide fire protection. It is manufactured by spinning a molten mixture of natural rock and recycled blast furnace waste products into fibres which are bonded with a thermosetting resin.

GYPROCK® PLASTERBOARD

Hebel intertenancy and corridor walls incorporate Gyprock® plasterboard on both sides. The type, thickness and densities of plasterboard will be as per the specified wall requirements. The minimum mass of plasterboard must be 8.5kg/m².

Additional information is available from CSR Gyprock.

FIXINGS

Most screw fixings are timber type, which is sufficient for penetrating the metal thicknesses outlined in this Design Guide. Connections that have larger metal thicknesses may require a metal type screw and will need to be designed and approved by the project engineer.

Slotted head / base angles to concrete fixings

The fixing to secure the tracks to the concrete slab and soffits over shall be as follows:

- Hilti HUS3-H M8 screw anchor; or
- Hilti HUS4-H M8 screw anchor; or
- Ramset M8 AnkaScrew Xtrem.

Suitable for Seismic Performance Category C1 and C2 at 600mm maximum centres and maximum 150mm from each end of the angle installed in accordance with manufacture's specifications. The screw anchors require a minimum 55mm embedment depth and should be installed at centre of the angle slots.

PowerPanel to slotted head and base angle fixings

- Use 14-10 x 65mm hex head type 17 screw or equivalent, when fixing through the angle into the panel. Angles with BMT greater than 0.75mm will have to be slotted.



- Use 14-10 x 150mm hex head type 17 screw or equivalent, when fixing into panel at corner or T-junction.



- Use 14-10 x 100mm MP bugle head screw or equivalent, when fixing through panel and into angle. For angles with BMT greater than 0.75mm, screw will require the appropriate tip.



Gyprock® plasterboard to PowerPanel fixing

- N°10 x 50mm bugle head coarse thread screw or equivalent.



Furring channel mounting clip to PowerPanel fixing

- 12-11 x 65mm hex head screw type 17.



Gyprock® plasterboard to furring channel / metal stud fixing

- N°6 x 25mm type S needlepoint screw or equivalent.

Door frames to PowerPanel fixings

- Check screw requirements with door manufacturer's specifications.

2.1 ACOUSTIC PERFORMANCE

NCC COMPLIANT HEBEL INTERNAL WALL SYSTEMS

The wall systems outlined have been assessed to comply with the NCC requirement for intertenancy, corridor, shaft and service walls. This table must be read in conjunction with all information provided in this Design and Installation Guide, and acoustic opinions 20210103.7/1608A/R2/TB and 2010861.3/1506A/R0/GW provided by Acoustic Logic Consultancy Pty Ltd and acoustic test ATF-676. Selection of Hebel internal wall systems shown in the table should be taken with specialist consultant's advice. For walls requiring discontinuous construction, the gap/cavity must be 20mm minimum.

IMPACT SOUND PERFORMANCE

All Hebel intertenancy walls are cavity wall systems without connections between the separate wall leaves. Therefore, no mechanical path exists for the transmission of impact sound. Provided a 20mm gap is maintained between the separated wall leaves, all intertenancy walls can meet the 'discontinuous construction' requirement of the NCC.

ACOUSTIC PERFORMANCE DESIGN RECOMMENDATIONS

1. Hebel recommends engaging a specialist acoustic consultant on a project-by-project basis to provide design advice, confirmation of anticipated field performance, detailing and installation inspections.
2. When selecting the appropriate Hebel wall, the designer or specifier must be aware that the laboratory R_w values are almost always higher than the field measured values. Therefore, allowances should be made for the lower expected field values during the selection of the system.
3. Separate advice from a specialist acoustic consultant should be sought to determine the effect on acoustic performance due to any changes to the Hebel wall systems, and any required modification of the installation details pertaining to the systems.
4. Increasing of cavity widths, using higher density or thicker insulation or plasterboard, will generally maintain or increase the acoustic performance of the Hebel wall.
5. The acoustic performance values of the Hebel walls shown in the systems pages are a guide only as to expected lab test performance. They do not constitute

a field performance guarantee as factors such as the presence of flanking paths, quality of installation of the system, onsite detailing of junctions, room shapes and size, etc can significantly affect field performance. Maximising the field performance depends on the following factors:

- systems are installed in accordance with the manufacturer's standard installation details.
- good quality installation practices including the sealing of all junctions and joints and maintaining specified clearances.
- systems are installed with all junctions acoustically sealed so that negligible sound transmission occurs at these points.
- all services penetrations, etc are acoustically sealed and treated so that negligible sound transmission occurs through these points.
- flanking paths are eliminated and the structures into which the systems are installed are capable of allowing the nominated rating to be achieved. Contact Hebel Technical Services for further information on flanking path.
- site testing conditions.

2.2 FIRE RATING PERFORMANCE

FIRE RESISTANCE LEVEL (FRL) RATINGS

The maximum wall heights in the systems described in this Design and Installation Guide are taken from CSIRO Fire Test Report FSV 0979 and CSIRO Assessment Report FCO 3035 and FCO 3304. These values are only applicable to the Hebel walls outlined in this Design and Installation Guide.

The fire performance for the various junctions of these wall systems (head details at concrete soffit, wall base details, control joint details including junctions with concrete walls and columns and a suite of service penetrations details) using CSR FireSeal sealant are covered in Exova Warringtonfire Assessment Report 27915 and CSIRO Assessment Reports FCO 3035 and FCO 3304.

The FRL rating of the wall can be affected by the penetrations and the method adopted to protect these penetrations. A fire collar with a -/60/60 FRL rating will govern the FRL of the wall, even if the wall configuration has a FRL rating of -/90/90.

FIRE PROTECTION OF PENETRATIONS

Penetrations through a Hebel wall to accommodate pipework, electrical cabling or ductwork will have to be protected (fire stop), to prevent the spread of fire through the penetration. The fire stopping solution is to allow a minimum 20mm between slotted angle and the fire stopping product.

CSR Hebel provides a fire-rated sealant, CSR FireSeal and recommends contacting a reputable manufacturer of fire protection systems for other appropriate products such as fire collars.

2.3 STRUCTURAL PERFORMANCE

STRUCTURAL PERFORMANCE

Hebel internal wall systems are non-loadbearing walls used in internal applications. The walls are designed to resist a maximum ultimate internal wind pressure of 0.375kPa, and a deflection limit of H/240 (Height ÷ 240) or 20mm maximum.

Contact Hebel Technical Services if internal wind pressures exceed 0.375kPa.

Table 2.3.1 Recommended minimum gap between the stud frame and PowerPanel

Wall height (mm)	H/240 (mm)	Minimum gap (mm)
2400	10	12
2550	11	13
2700	12	14
2850	12	14
3000	13	15
3200	14	16
3550	15	17
3900	17	19
4200	18	20

CUTTING OF HEBEL POWERPANEL

The standard Hebel PowerPanels can be reduced in length by cutting 100mm maximum from each end, and to a minimum width of 270mm.

STEEL STUD FRAME

The steel framing presented in this Design and Installation Guide for various wall systems has not been approved for the design parameters in this Design and Installation Guide. It is the designer’s responsibility to determine an appropriate steel framing system. Several items the designer must allow for are: lateral loadings, wall height, deflection limits, offset distance (gap) from the panel, building movement and control joint locations.

As a minimum the wall will have a deflection limit of H/240. As a guide, Hebel recommends providing a minimum gap distance of Height/240 + installation tolerance. For example, H = 2400mm and installation tolerance = 2mm, then minimum gap = 2400/240+2 = 12mm. This is to ensure that the two leaves of the cavity wall do not touch during service loading. Table 2.3.1 outlines the recommended minimum gap to suit a range of wall heights for the H/240 deflection limit. For walls requiring discontinuous construction a minimum gap of 20mm must be specified to meet the NCC requirements.

CUSTOM HEBEL POWERPANEL

For walls heights exceeding 3300mm or design parameters outside the scope of this guide, the panels will be custom Hebel PowerPanels. These panels are designed to satisfy the project’s individual design parameters, such as internal lateral (wind) pressure and onsite cutting requirements. Custom panels are subject to manufacturing lead times.

EARTHQUAKE LOADING

- Earthquake loading has been considered in this Design and Installation Guide for up to 4.65m wall height for vertical installed panels and up to 30m wall height for horizontal installed panels.
- For vertical installed panels, the maximum allowable deflection the system is certified for due to interstorey drift is ± 20mm.
- For horizontal installed panels, the maximum allowable deflection the system is certified for due to interstorey drift shall not exceed ± H/400 (H=wall height).
- The anchors for slotted head/ base angles into concrete notes in this guide are compliant to AS 5216.
- The walls certified in this guide are not part of the seismic force resisting system of the building.

3.1 INSTALLATION FLOWCHARTS

HEBEL WALL LEAF SHOULD BE INSTALLED BEFORE SERVICES

Figure 3.1.1 Intertency, corridor and shaft wall systems with linings - Vertical installation


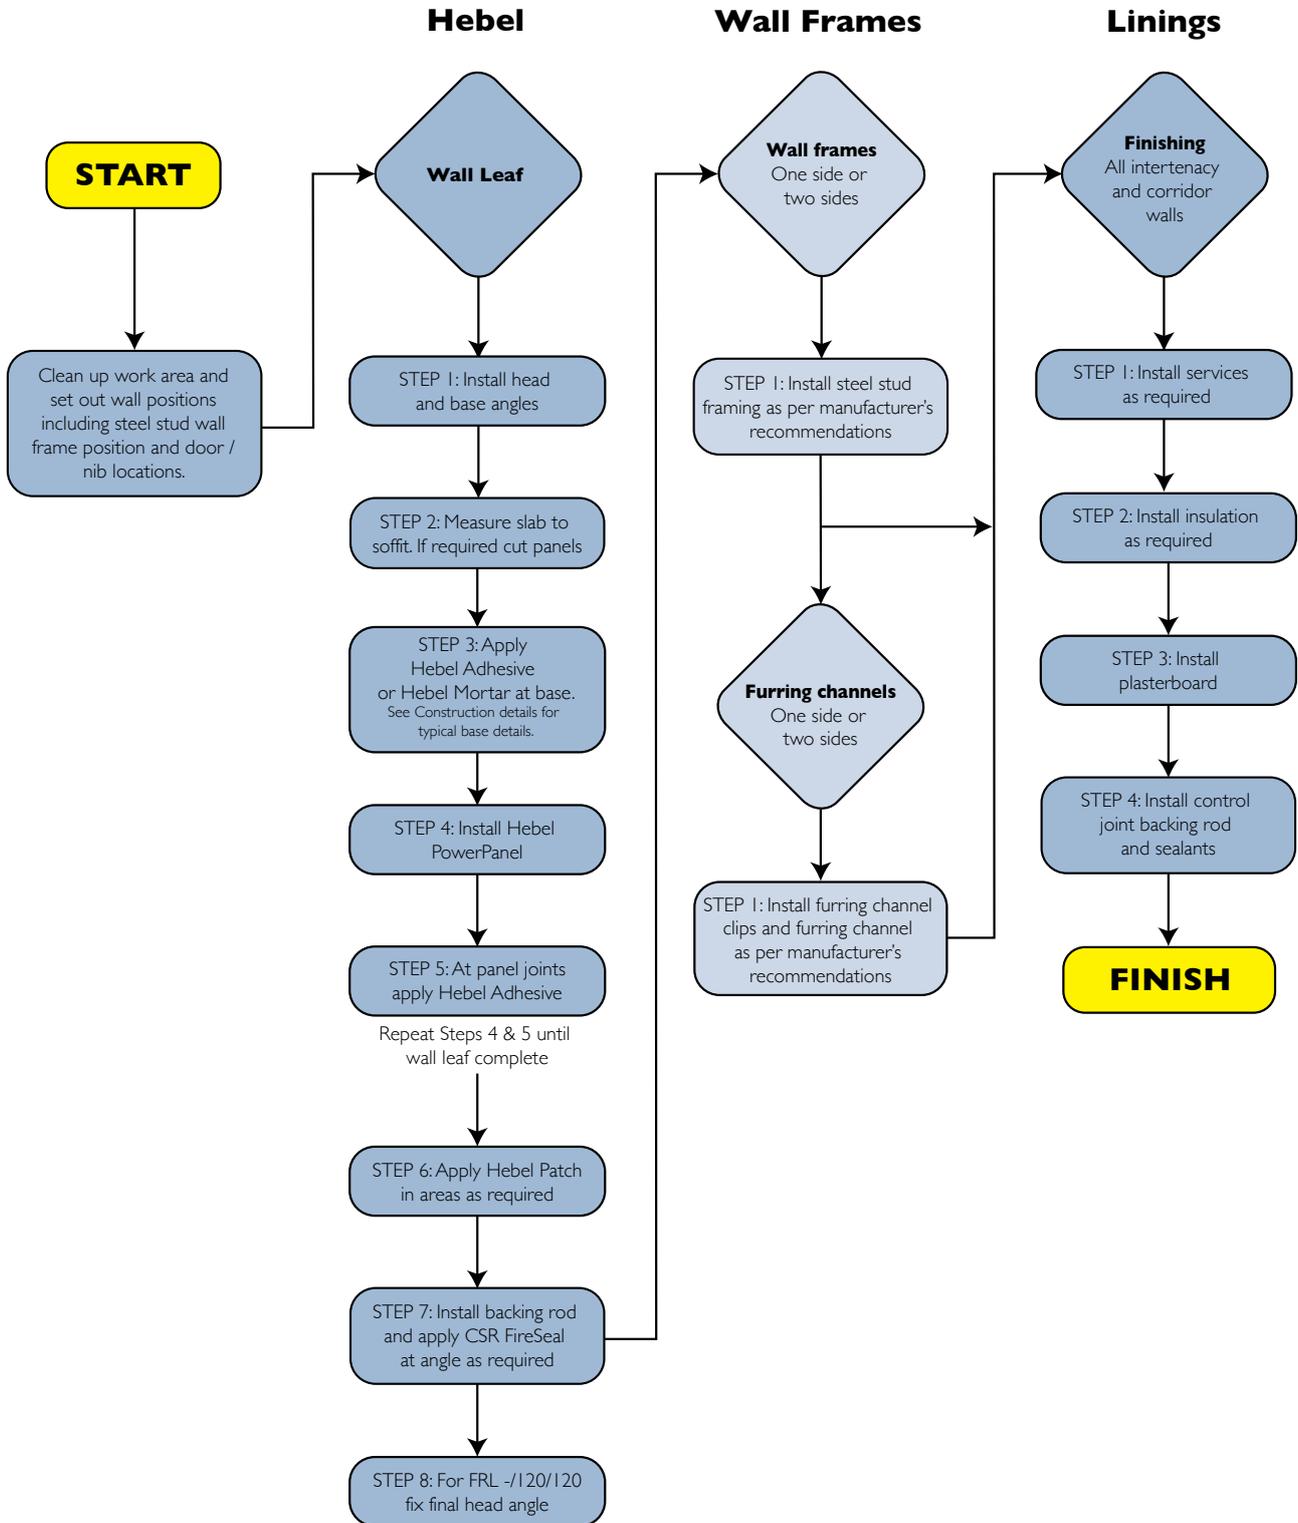


Figure 3.1.2 Shaft and services wall systems - vertical and horizontal installation

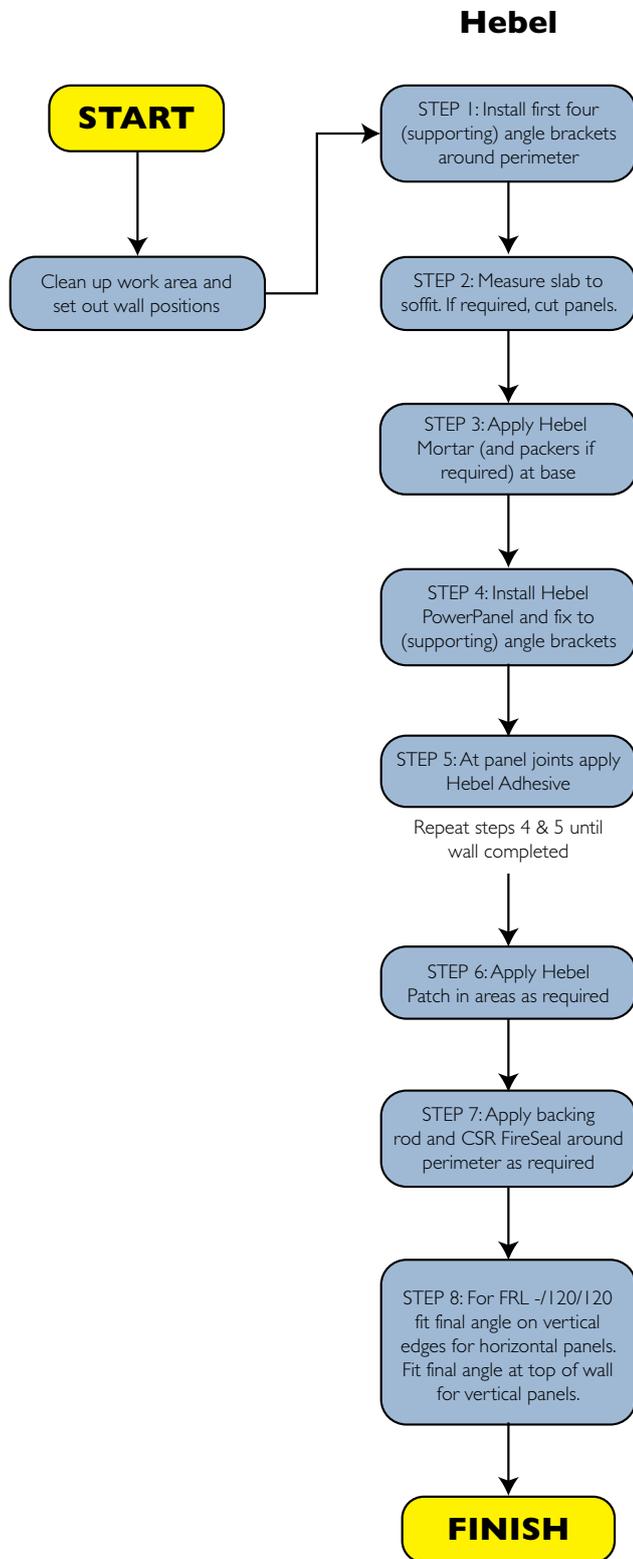

3.2 INSTALLATION

HEBEL WALL LEAF SHOULD BE INSTALLED BEFORE SERVICES

SETTING OUT AND POSITIONING OF WALLS

Before commencing any installation work, clean and tidy up the work area. Mark out the location of the walls and door nibs, etc.

SLOTTED HEAD AND BASE ANGLE INSTALLATION

When the wall locations have been set out, fix the slotted angles and base angles to the concrete support structures. This is done using suitable fixings (see **System components** section) at 600mm maximum centres and maximum 150mm from ends. Seal all butt joints in head angle with CSR FireSeal.

HEBEL POWERPANEL INSTALLATION

The panels can be cut onsite using a circular saw equipped with diamond tipped turbo cutting blade (for panel cutting limitations (see **Structural performance** section). All the loose AAC particles should be brushed off the panel with a stiff broom. Steel reinforcement that is exposed during cutting must be coated with a liberal application of Anti-Corrosion Protection Paint (see **System components** section). Any minor damage and chips to the panels must be repaired using Hebel Mortar.

Apply Hebel Adhesive or Hebel Mortar to base before installing panel. For gaps ≤ 5 mm use Hebel Adhesive. For gaps over 5mm pack up with Hebel Mortar (maximum 15mm).

Fix the panel to the head and base angle with a minimum of two screws (see **System components** section and **Construction details** section), 50mm minimum from each end of the panel.

For following panels, apply thin bed adhesive to the entire vertical edge and install the next panel. Repeat the installation process until the wall is complete.

HEBEL ADHESIVE APPLICATION

Hebel Adhesive is applied to the panel with a trowel.

When the panels are pushed together the joints are to be 2-3mm thick. Sufficient pressure must be applied to the panels when gluing to ensure the adhesive is fully bedded across the joint. Scrape off any excess adhesive protruding from the joints and fill any gaps.

Adhesive is to be mixed to the proportions and consistency as per the instructions on the bag.

BACKING ROD AND CSR FIRESEAL APPLICATION

The backing rod should be installed to the manufacturer's specifications.

CSR FireSeal should be applied with a minimum 10mm depth in all applications. Maximum widths are shown in the **Construction details** section of this Design and Installation Guide. For details not shown please contact CSR Hebel.

FURRING CHANNEL CLIP INSTALLATION

The installation of the clips is typically at a maximum 600mm horizontal spacing and 1200mm vertical spacings with 2 screws per clip. See **System components** section for appropriate fixings.

FURRING CHANNEL INSTALLATION

Furring channels are fitted in floor / soffit tracks and clips on the wall. Furring channels should also be installed so they extend to the floor. For further information refer to manufacturer's literature.

STEEL STUD FRAMEWORK INSTALLATION

All steel stud frameworks are to be installed to the manufacturer's specifications.

INSTALLATION OF BRADFORD INSULATION

Installation of insulation should be completed in accordance with manufacturer's handling and installation guidelines. The thickness of insulation provided should fully fill the cavity between studs or furring channels.

Insulation must be installed from concrete slab to concrete soffit. If there is any gap in the insulation the acoustic performance of the system may be adversely affected.

GYPROCK® PLASTERBOARD

Plasterboard sheets must be cut to fit neatly and should not be forced into position. The plasterboard is to extend to at least the ceiling level.

In Hebel intertenancy and corridor walls plasterboard is fixed directly to Hebel PowerPanel, steel furring channel or stud framework:

- Direct fix to Hebel: plasterboard is to be installed in accordance with the Gyprock® plasterboard installation guidelines. Appropriate screws must be used to secure in position (see **System components** section).
- Fit to furring channel or stud frame: plasterboard is to be installed in accordance with the The RedBook 03 - Commercial & Multi- Residential Installation Guide - Class 2-9 Buildings.

The minimum mass of plasterboard must be 8.5kg/m².

Handling and installation guidelines and additional information is available through CSR Gyprock.

Note: plasterboard must be screw-fixed only as gluing of sheets can adversely affect acoustic rating of system.

INSTALLATION OF FINAL SEALANTS

All movement joints and other gaps should be sealed off and finished neatly with CSR FireSeal. Installation of CSR FireSeal must be carried out in accordance with the manufacturer's specifications.

INSTALLATION OF PENETRATIONS: ELECTRICAL, PLUMBING AND OTHER SERVICES

Installation of services and penetrations into Hebel internal wall systems should be carried out in an appropriate construction sequence. This will allow easy access to cavities, steel framed elements and Hebel panels, where services can be easily installed and neatly hidden. Hebel recommends installing the plumbing and cabling after the panels have been installed. The builder or project manager should confirm appropriate construction sequence for services and penetrations on a project by project basis.

Neat finishes for all penetrations are necessary to maintain the acoustic and fire integrity of the wall. See **Construction details** section in this Design and Installation Guide.

Contact your fire and acoustic consultants for detailing of penetrations to ensure the nominated fire and/or acoustic performance is achieved.

INSTALLATION OF FASTENERS AND FIXINGS

All fixings and fasteners should be installed in accordance with the manufacturer's specifications.

The correct sized fasteners for the construction of the wall system must always be used. Refer to the **System components** section for these fasteners.

3.3 DESIGN & INSTALLATION CONSIDERATIONS

ACOUSTIC AND FIRE INTEGRITY

Penetrations in walls for electrical fittings, telecommunications, large ductwork or plumbing systems can be a substantial source of sound leakage, which can affect the acoustic and fire performance of the wall.

When electrical, telecommunication or plumbing services are required, the contractor should install these services neatly and, when passing through the wall, should provide a close fitting hole, sealed with CSR FireSeal. Details of fire stopping products not covered within this Design & Installation Guide are to be specified by an appropriate consultant and installed in accordance with the manufacturer's recommendations.

To prevent noise from water pipes degrading the acoustic amenity of the wall system, these pipes should be acoustically wrapped and resiliently fastened.

Where acoustic integrity is important, electrical switches must not be installed back-to-back as this could be a source of sound leakage. Refer Figure 3.3.1 (below) for switch box layout guidance.

Note: wall chasing is not permitted in accordance with the NCC (Volume 1 Specification F5.2).

CONTROL JOINTS

Control joints must be provided at a maximum of 6m spacing. Recommended control joint widths should be 10mm minimum between PowerPanel and other building component. Control joints must also be provided to coincide with any control joint in the main structure. The slotted head angle and base angle must be discontinuous at a structural control joint. Refer to the **Construction details** section for control joint details.

DOOR FRAMES

Door frames can either be built-in as the wall is being constructed or fitted after the Hebel PowerPanel has been installed. Samples of door frame details have been included in the **Construction details** section. It is required that the doorset be tested in accordance with AS1530.4 and/ or assessed in accordance with AS 1905.1 for installation in the Hebel panel walls. For further information and installation requirements, please contact your chosen door frame manufacturer.

FIRE DAMPERS


Hebel internal wall systems can accommodate penetrations for fire dampers. The gap between the fire damper and the wall is to be treated in accordance with fire damper manufacturer's recommendations. The installation of fire damper to be in accordance with fire damper manufacturer's requirements. Refer to the **Construction details** section for a typical fire damper detail.

WALL CHASING

Wall chasing is not permitted in accordance with the NCC (Volume 1 Specification F5.2) in any acoustic or fire rated wall system.

WET AREA WALL CONSTRUCTION

Wet area wall construction may require a system that enables services to be installed in a cavity. Where back-to-back services are to be installed, a system that incorporates a cavity on both sides of the wall is required. All plumbing should be acoustically treated as required by the NCC. All wet area walls should be lined and waterproofed in accordance with Australian standards and to NCC requirements. Gyprock Aquachek™ or Cemintel™ Wallboard are suitable lining materials for wet area applications.

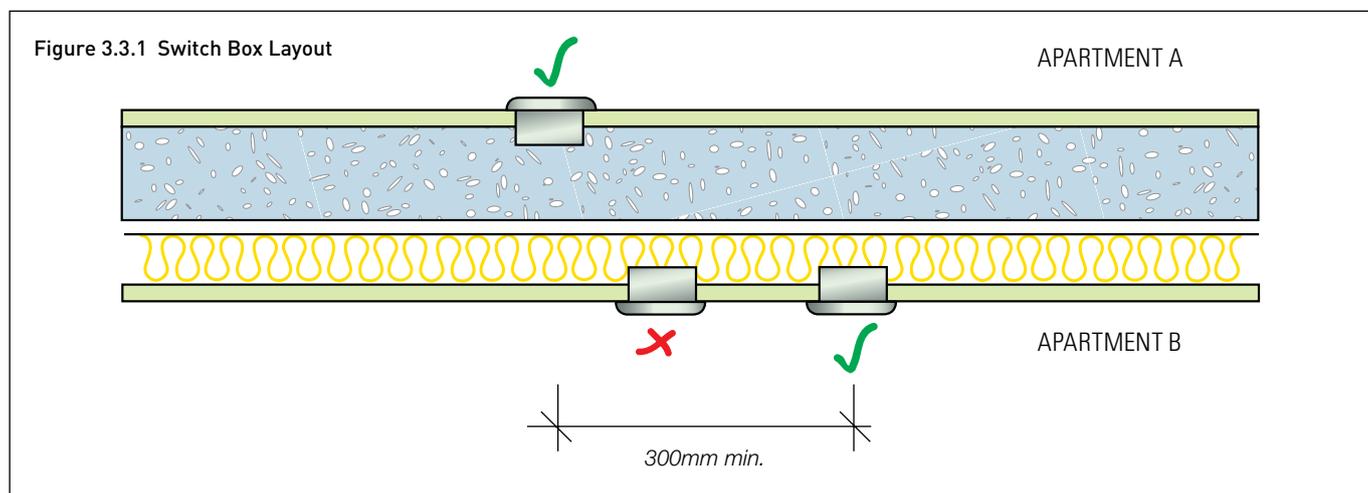

3.4 COATINGS

Typically in commercial applications, the surface finish of Hebel internal walls is determined according to project specifications and the intended use of the building. Hebel service shaft walls and scissor stair spine walls can be left in their manufactured finish or simply and inexpensively coated with a paint or textured paint.

If a coating is required, products such as Dulux Professional Total Prep may be used. Total Prep is a high quality, white or tintable 100% acrylic primer / sealer / undercoat

with excellent opacity, adhesion, flow, sealing and filling properties. It can be applied using airless / conventional spray or brush and roller. Refer to Dulux for more information and other paint finishes.

All substrate preparation and coating applications should be in accordance with the coating manufacturer's specification.

3.5 CONSTRUCTION DETAILS OVERVIEW

-  Hebel PowerPanel tongue & groove (T&G) H ≤ 3300mm
-  Hebel PowerPanel caged tongue & groove (T&G) vertical H ≤ 4650mm
-  Hebel PowerPanel caged tongue & groove (T&G) horizontal H ≤ 30m

Table 3.5.1 Construction details overview

FRL up to -/90/90				
Head and base details	Head angle connection for panel heights ≤ 3300mm	Figure 3.6.1.1	Page 30	
	Head angle connection for panel heights > 3300mm	Figure 3.6.1.2	Page 30	
	Base angle connection for panel heights ≤ 3300mm	Figure 3.6.1.3	Page 30	
	Base angle connection for panel heights > 3300mm	Figure 3.6.1.4	Page 30	
	Alternate base angle connection for installation from one side only	Figure 3.6.1.5	Page 30	 
Vertical junction details: internal	Vertical edge with tongue & groove panel profile	Figure 3.6.2.1	Page 31	 
	Splay corner junction	Figure 3.6.2.2	Page 31	
	Panel to column junction	Figure 3.6.2.3	Page 31	 
	Panel to panel junction	Figure 3.6.2.4	Page 31	 
	Hebel Intertency to Corridor wall junction	Figure 3.6.2.5	Page 31	 
	Panel side to panel overlap junction	Figure 3.6.2.6	Page 31	
	Offset panel to column detail for FRL -/60/60	Figure 3.6.2.7	Page 32	 
	Offset panel to column with CSR FireSeal™ fillet	Figure 3.6.2.8	Page 32	
	Offset panel to column with CSR FireSeal™ fillet	Figure 3.6.2.9	Page 32	
Vertical junction details: external	Hebel Intertency / Corridor Wall to Hebel Facade Wall junction	Figure 3.6.3.1	Page 32	 
	Hebel Intertency / Corridor Wall to Hebel Facade Wall junction - SECTION AA	Figure 3.6.3.2	Page 32	 
	Hebel Intertency / Corridor Wall to brick veneer junction	Figure 3.6.3.3	Page 33	 
	Hebel Intertency / Corridor Wall to brick veneer junction - SECTION BB	Figure 3.6.3.4	Page 33	 
Door details	Door opening	Figure 3.6.4.1	Page 33	 
	Door nib	Figure 3.6.4.2	Page 33	 
	Lintel junction detail with 100mm seating - SECTION AA	Figure 3.6.4.3	Page 33	
	Lintel junction detail with 50mm seating - SECTION AA	Figure 3.6.4.4	Page 33	
	Optional square edge panel connection detail with no seating and skewed screw	Figure 3.6.4.5	Page 34	
	Door nib detail for widths 100-300mm - SECTION BB	Figure 3.6.4.6	Page 34	 
	Apartment fire door	Figure 3.6.4.7	Page 34	 
	Hebel Intertency wall to corridor at door frames	Figure 3.6.4.8	Page 34	
Control joint (CJ) detail	Hebel Intertency / Corridor wall with fire-rated control joint	Figure 3.6.5.1	Page 34	 
Penetration and services details	Large aperture with horizontal infill panels	Figure 3.6.6.1	Page 35	
	Panel strengthening	Figure 3.6.6.2	Page 35	
	Metal pipe penetration through head angle	Figure 3.6.6.3	Page 35	
	Metal pipe penetration	Figure 3.6.6.4	Page 35	 
	Power switch / outlet installation with backfill to panel side	Figure 3.6.6.5	Page 35	
	Service penetration zones across two lintel panels	Figure 3.6.6.6	Page 36	
	Hebel Service Panel	Figure 3.6.6.7	Page 36	 
	Power switch / outlet installation to panel side	Figure 3.6.6.8	Page 36	 
	Power switch / outlet installation to steel stud or furring channel	Figure 3.6.6.9	Page 36	 
	Cable installation within the cavity for switch / outlets located on both sides of wall	Figure 3.6.6.10	Page 36	 
	Fire damper penetration	Figure 3.6.6.11	Page 36	 
	Plastic pipe penetration with in-wall type fire collar	Figure 3.6.6.12	Page 37	 
	Plastic pipe penetration with wall mounted fire collar	Figure 3.6.6.13	Page 37	 
	Details for maximum 300mm wide penetrations	Figure 3.6.6.14	Page 37	
	Details for maximum 400mm wide penetrations	Figure 3.6.6.15	Page 37	
	Details for maximum 500mm wide penetrations	Figure 3.6.6.16	Page 37	
	Details for maximum 600mm wide penetrations	Figure 3.6.6.17	Page 37	

Project specific requirements: please contact CSR Hebel for advice on any project specific designs not covered in this Design and Installation Guide.

-  Hebel PowerPanel tongue & groove (T&G) H ≤ 3300mm
-  Hebel PowerPanel caged tongue & groove (T&G) vertical H ≤ 4650mm
-  Hebel PowerPanel caged tongue & groove (T&G) horizontal H ≤ 30m

FRL up to -/120/120				
Vertical panel installation: head, base and side details	Vertical installation. Maximum wall height 4.65m	Figure 3.7.1.1	Page 38	
	Head connection	Figure 3.7.1.2	Page 38	
	Base connection	Figure 3.7.1.3	Page 38	
	Alternate base angle connection for installation from one side only	Figure 3.7.1.4	Page 38	
	Vertical edge connection	Figure 3.7.1.5	Page 38	
Horizontal panel installation: head, base and side details	Horizontal installation. Maximum wall height 30m	Figure 3.7.2.1	Page 39	
	Head angle connection	Figure 3.7.2.2	Page 39	
	Base angle connection	Figure 3.7.2.3	Page 39	
	Alternate base angle connection for installation from one side only	Figure 3.7.2.4	Page 39	
	Vertical edge connection	Figure 3.7.2.5	Page 39	
Vertical junction details	Tongue and groove junction for vertical or horizontal installation	Figure 3.7.3.1	Page 40	 
	Splay corner junction for vertical panel installation only	Figure 3.7.3.2	Page 40	
	Corner junction for vertical or horizontal installation	Figure 3.7.3.3	Page 40	 
	T-junction for vertical or horizontal installation	Figure 3.7.3.4	Page 40	 
	Large penetration in wall: option 1	Figure 3.7.3.5	Page 40	
	Large penetration in wall: option 2	Figure 3.7.3.6	Page 40	

3.6 CONSTRUCTION DETAILS: FRL UP TO -/90/90

▶ Hebel PowerPanel tongue & groove (T&G) H ≤ 3300mm
 ▶ Hebel PowerPanel caged tongue & groove (T&G) vertical H ≤ 4650mm

3.6.1 HEAD AND BASE DETAILS

Figure 3.6.1.1 Head angle connection for panel heights ≤ 3300mm

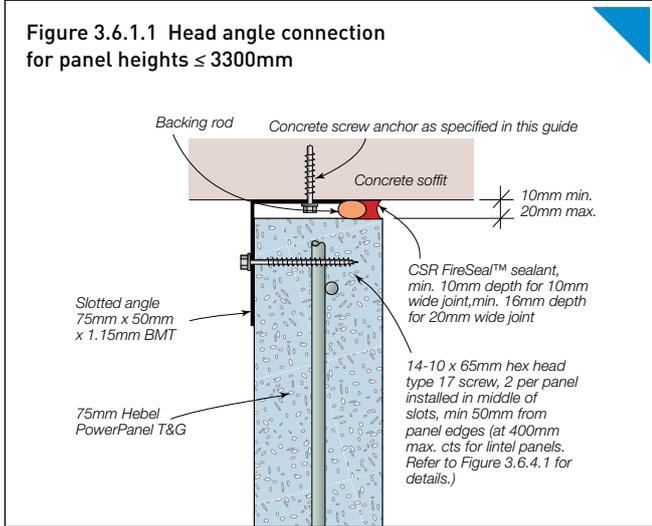


Figure 3.6.1.2 Head angle connection for panel heights > 3300mm

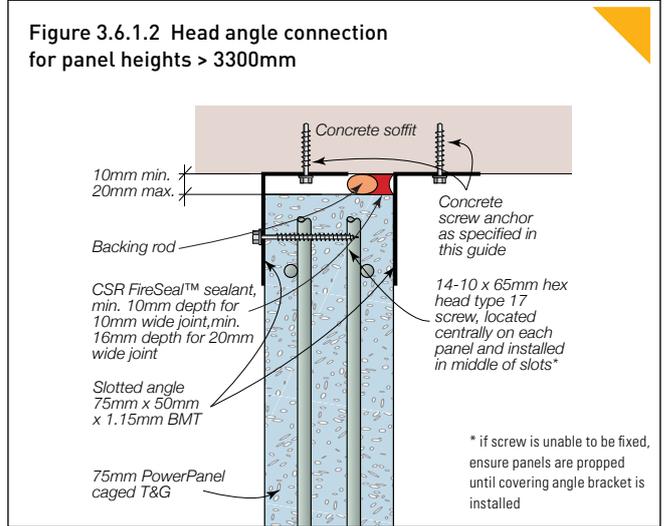


Figure 3.6.1.3 Base angle connection for panel heights ≤ 3300mm

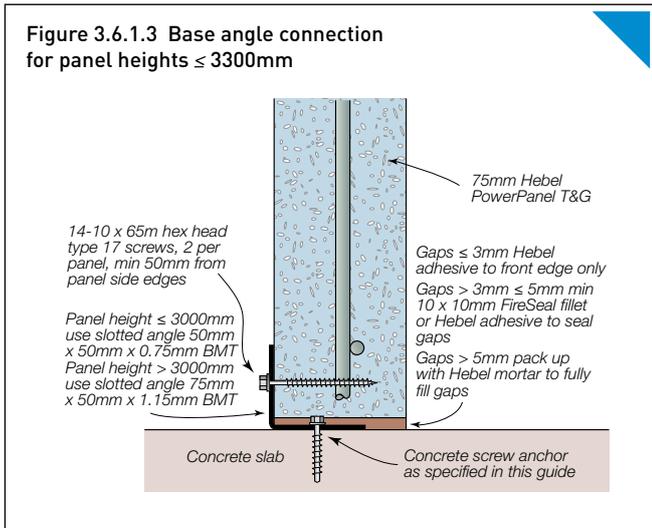


Figure 3.6.1.4 Base angle connection for panel heights > 3300mm


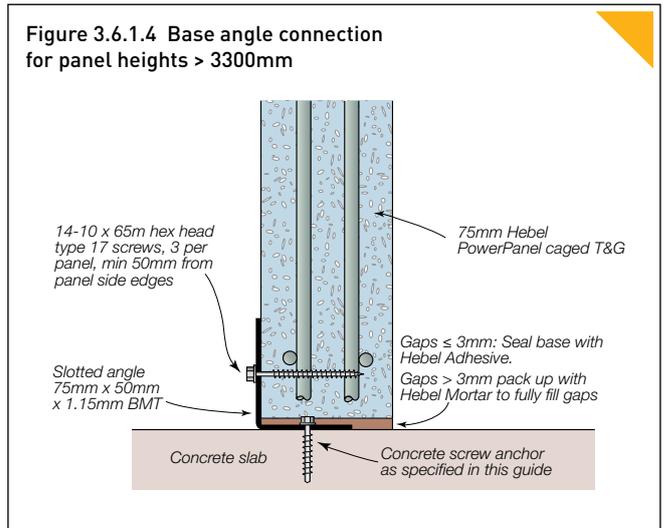


Figure 3.6.1.5 Alternate base angle connection for installation from one side only

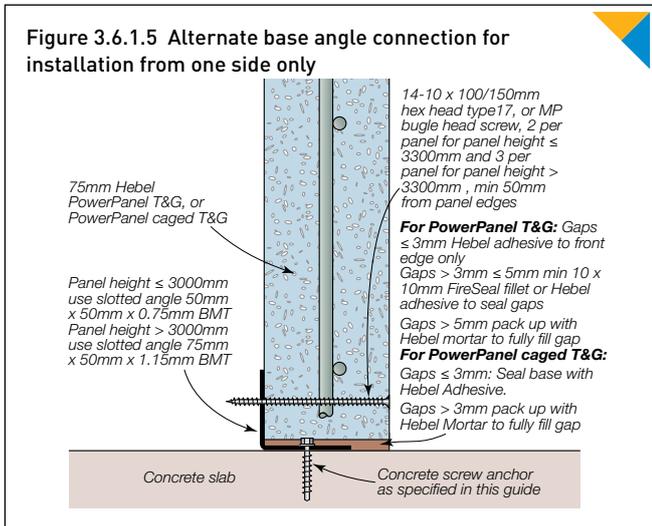

3.6.2 VERTICAL JUNCTION DETAILS: INTERNAL

Figure 3.6.2.1 Vertical edge with tongue & groove panel profile

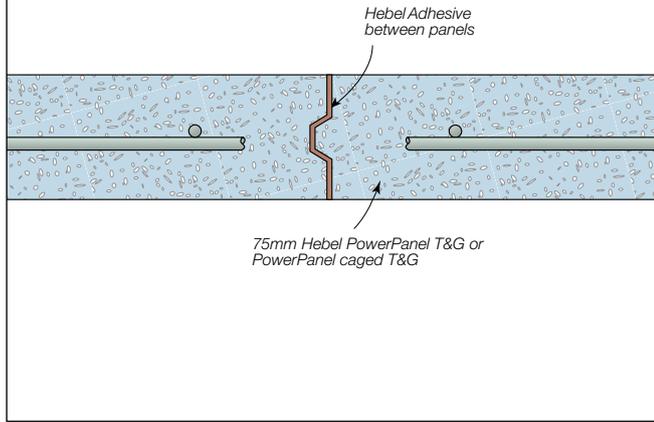


Figure 3.6.2.2 Splay corner junction

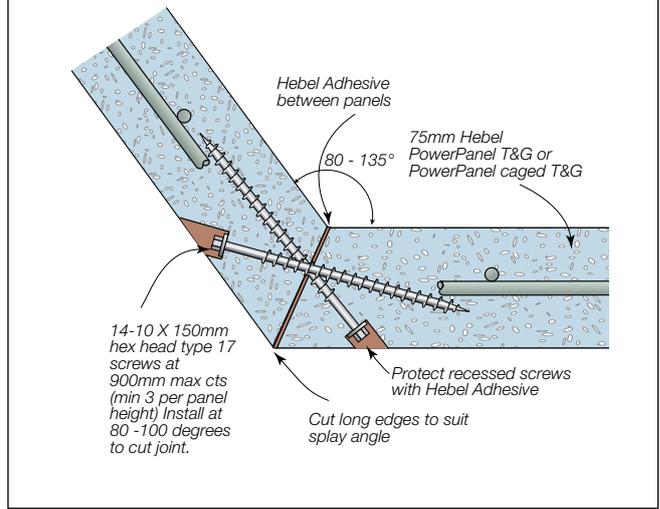


Figure 3.6.2.3 Panel to column junction

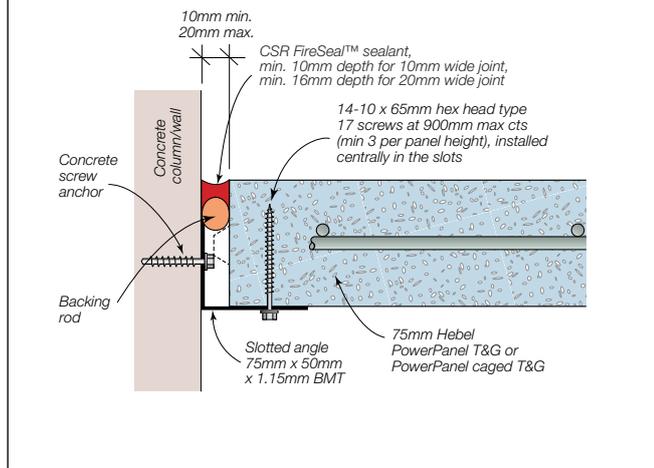


Figure 3.6.2.4 Panel to panel junction

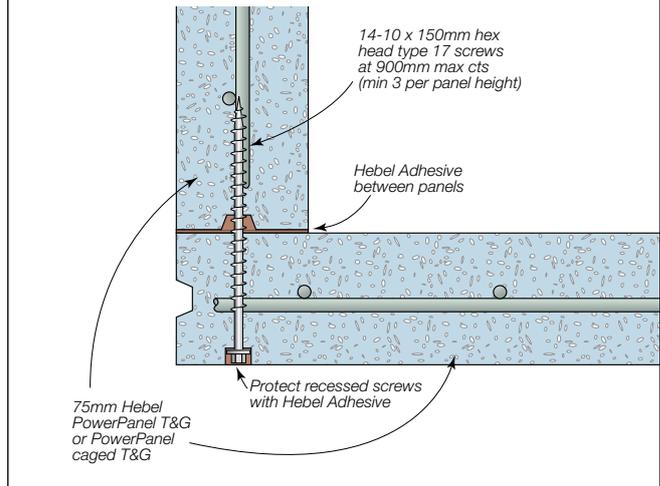


Figure 3.6.2.5 Hebel Intertency to Corridor wall junction

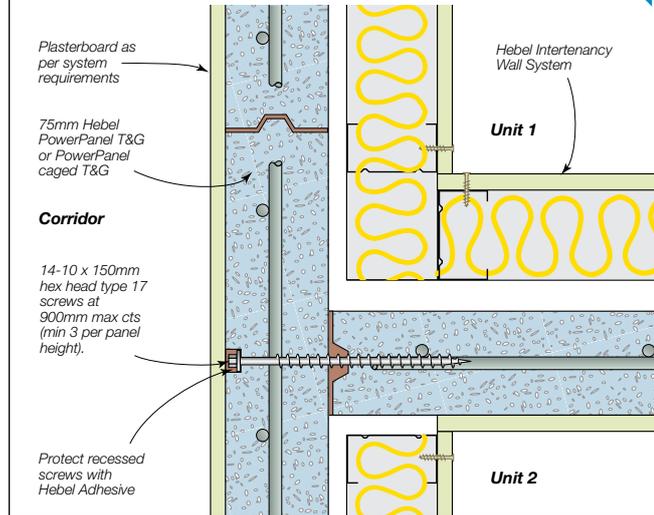


Figure 3.6.2.6 Panel side to panel overlap junction

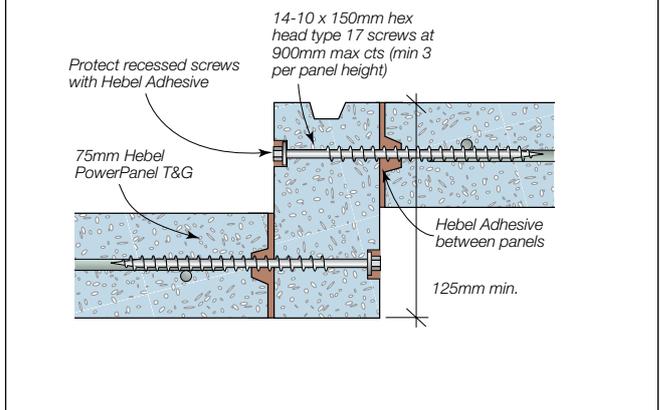


Figure 3.6.2.7 Offset panel to column detail for FRL -/60/60

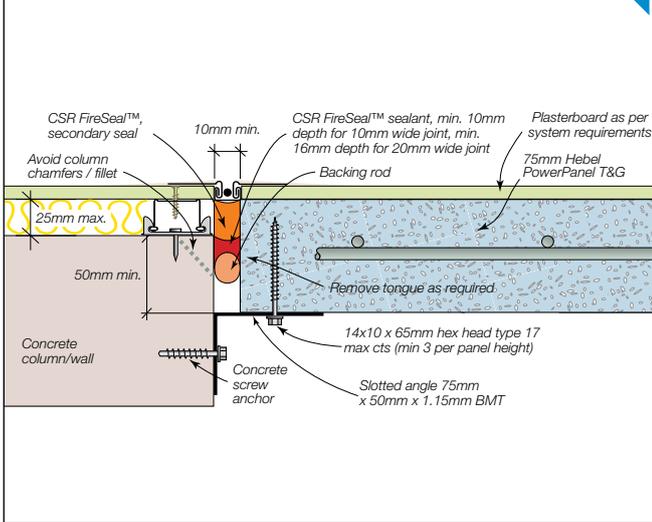


Figure 3.6.2.8 Offset panel to column with CSR FireSeal™ fillet


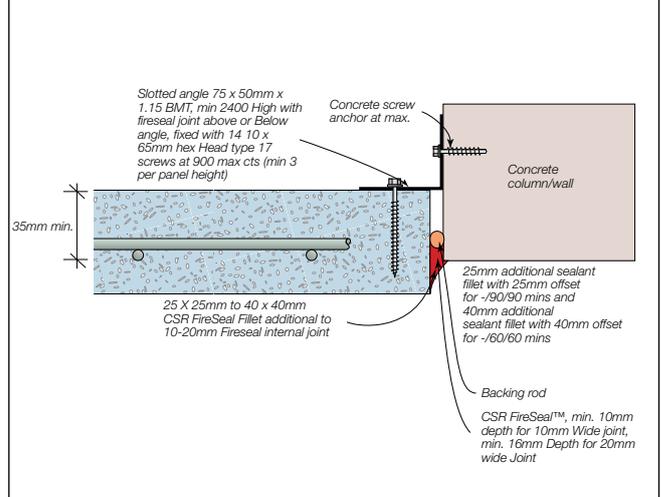


Figure 3.6.2.9 Offset panel to column with CSR FireSeal™ fillet

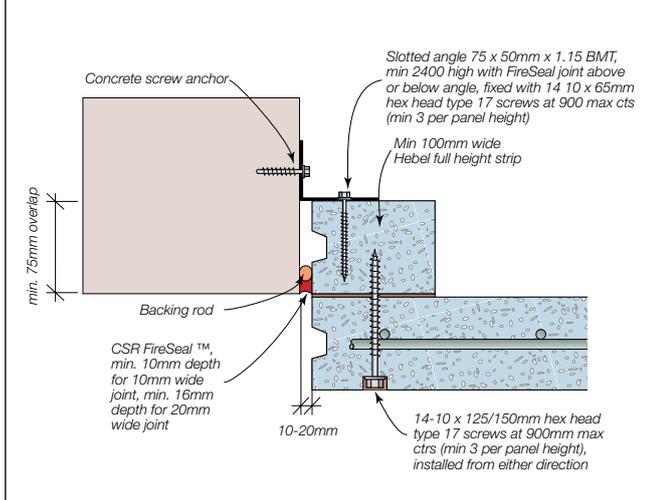

3.6.3 VERTICAL JUNCTION DETAILS: EXTERNAL

Figure 3.6.3.1 Hebel Intertency / Corridor Wall to Hebel Facade Wall junction

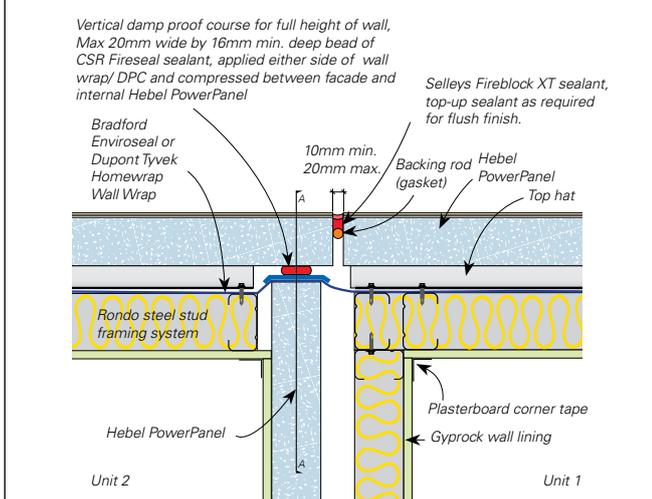


Figure 3.6.3.2 Hebel Intertency / Corridor Wall to Hebel Facade Wall junction - SECTION AA

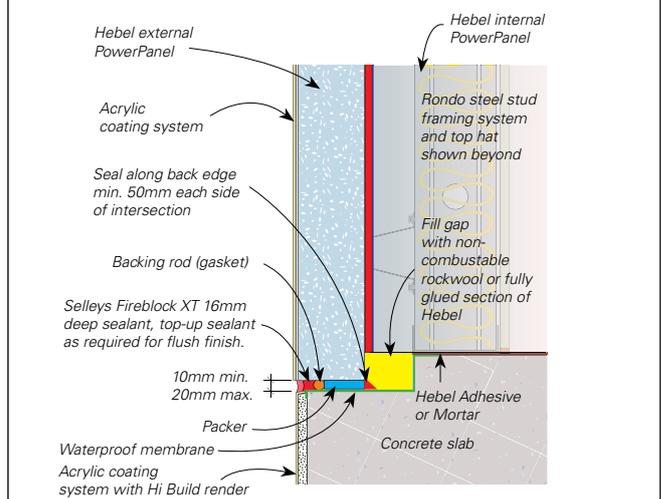


Figure 3.6.3.3 Hebel Intertency / Corridor Wall to brick veneer junction



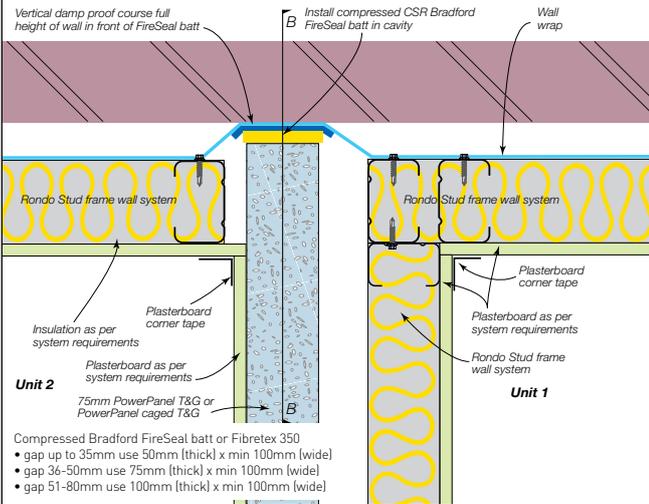


Figure 3.6.3.4 Hebel Intertency / Corridor Wall to brick veneer junction - SECTION BB

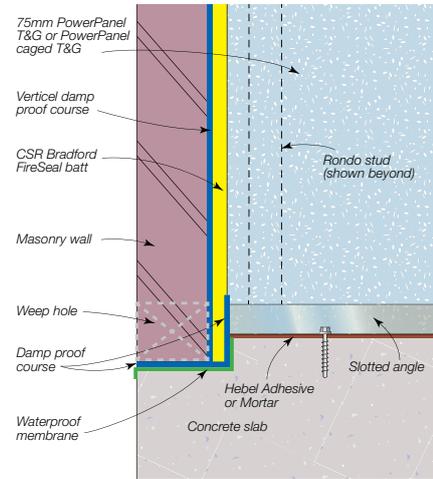


3.6.4 DOOR DETAILS

Figure 3.6.4.1 Door opening

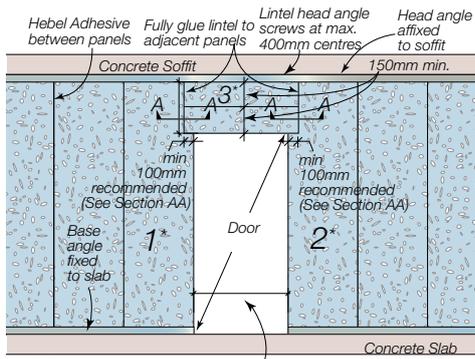

- Notes:
1. All door frame installations and detailing to be approved by door frame manufacturer.
 2. Continuously screw fix door frame to PowerPanel around perimeter of door opening.
 3. CSR Hebel recommends core filling of the door frame for additional robustness.
 4. Fix door frame at the base.
 5. No penetrations allowed in the first 1800mm each side of opening. If penetrations are required within this range please contact Hebel Technical services.
 6. Refer to door manufacturer for fire testing of the door set and frame with Hebel panels.

Figure 3.6.4.2 Door nib

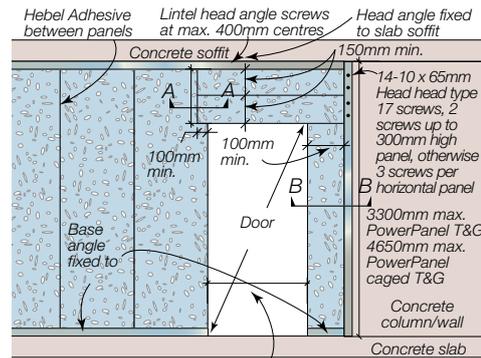

- Notes:
1. No penetrations allowed in the first 1800mm each side of opening. If penetrations are required within this range please contact Hebel Technical services.
 2. For side panel >300mm, use full height panel and 100mm min bearing for lintel panel.

Figure 3.6.4.3 Lintel junction detail with 100mm seating - SECTION AA

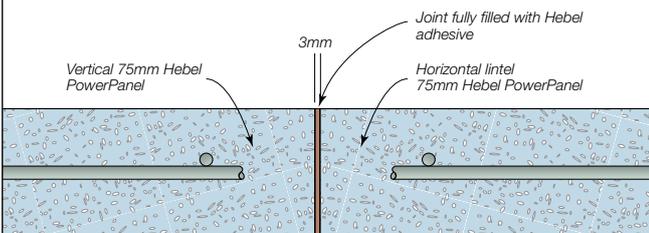


Figure 3.6.4.4 Lintel junction detail with 50mm seating - SECTION AA

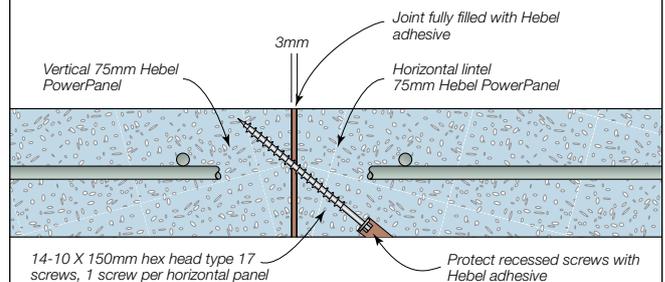


Figure 3.6.4.5 Optional square edge panel connection detail with no seating and skewed screws

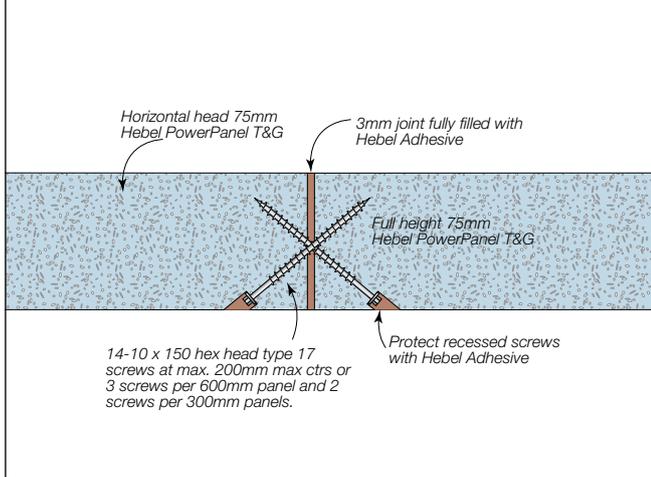


Figure 3.6.4.6 Door nib detail for widths 100-300mm - SECTION BB

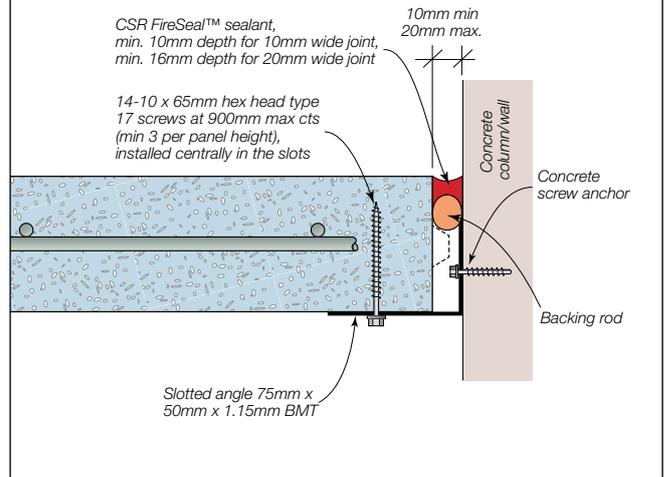


Figure 3.6.4.7 Apartment fire door



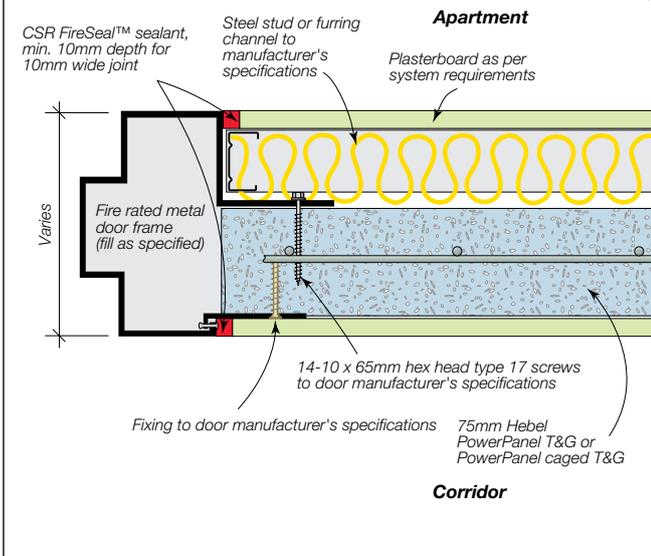


Figure 3.6.4.8 Hebel Intertency wall to corridor at door frames

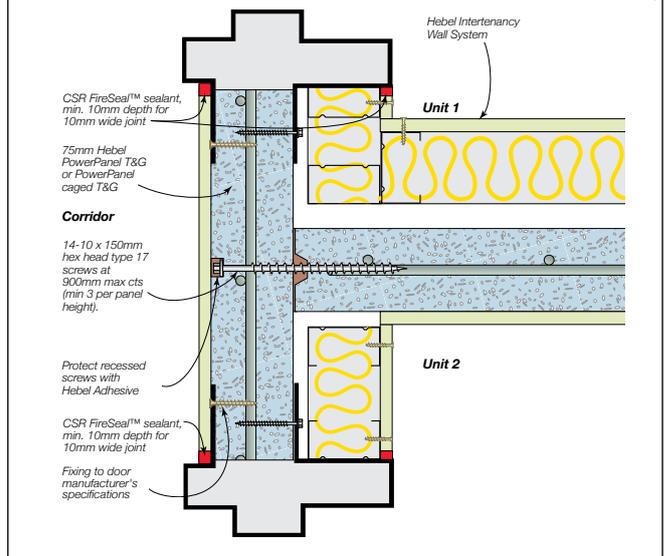

3.6.5 CONTROL JOINT (CJ) DETAIL

Figure 3.6.5.1 Hebel Intertency / Corridor wall with fire-rated control joint

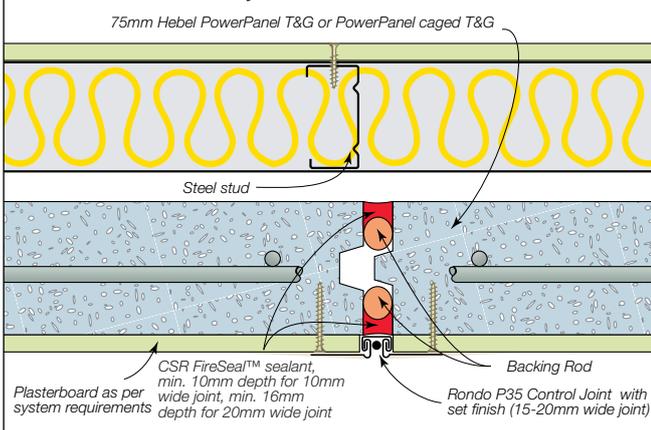

3.6.6 PENETRATION AND SERVICES DETAILS

Figure 3.6.6.1 Large aperture with horizontal infill panels


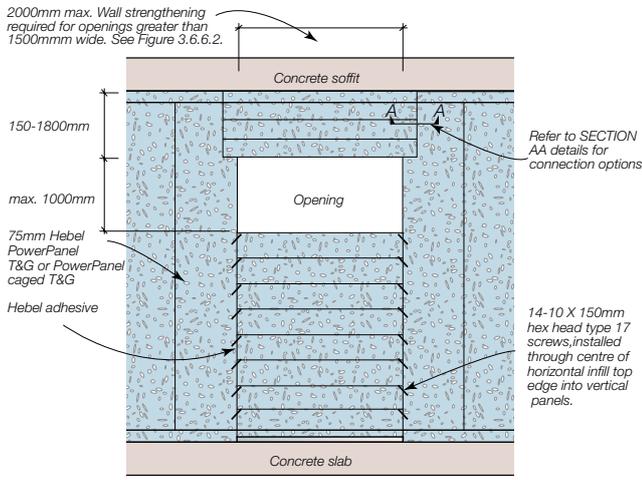


Figure 3.6.6.2 Panel strengthening

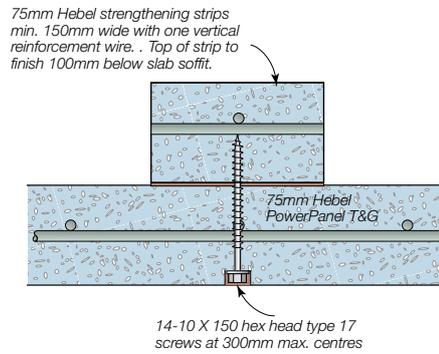

Note:
Strengthening required for the first panel either side of opening > 1500mm.

Figure 3.6.6.3 Metal pipe penetration through head angle

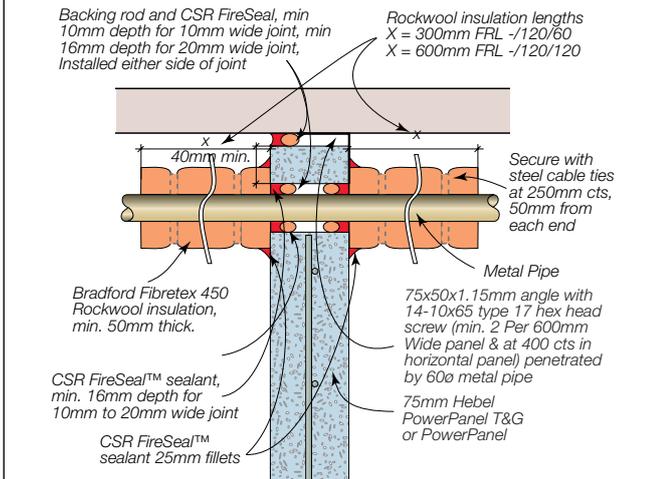


Figure 3.6.6.4 Metal pipe penetration

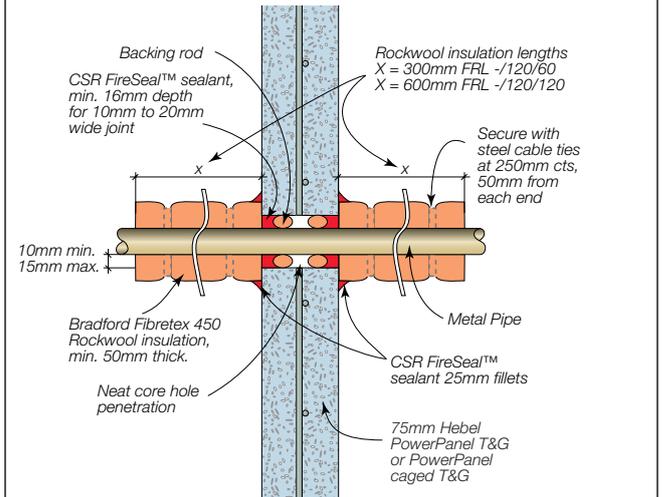


Figure 3.6.6.5 Power switch / outlet installation with backfill to panel side


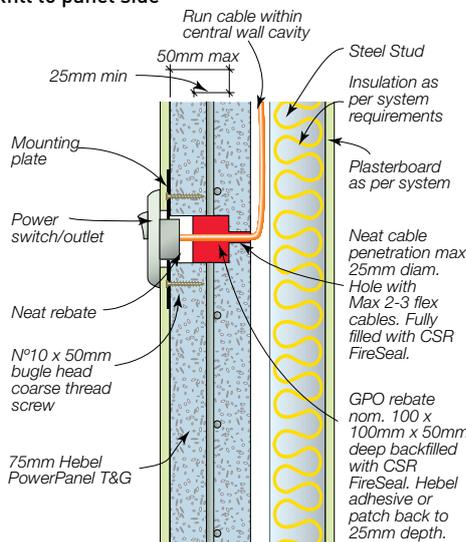



Figure 3.6.6.6 Service penetration zones across two lintel panels

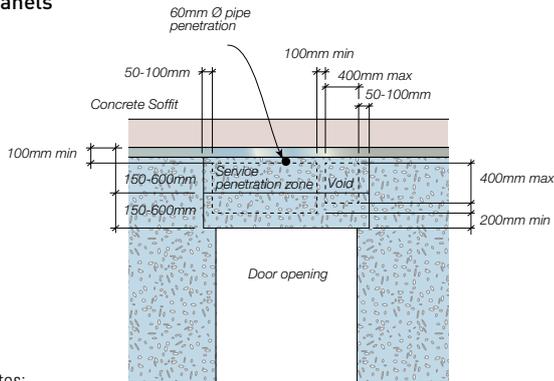

Notes:

- Min. 50mm between penetrations up to $\phi 150$ mm.
- Min. 100mm between penetrations $>\phi 150$ mm. Or 150x150mm.
- Head angle can be cut locally to accommodate 60ϕ service at soffit, or, min. 60mm down from soffit.
- Service penetration zone can extend full width of lintel.
- Void can be either side of penetration zone.
- Min separation between apertures only considers the hebel panel and may not be sufficient for min distances between different service types.

Figure 3.6.6.7 Hebel Service Panel

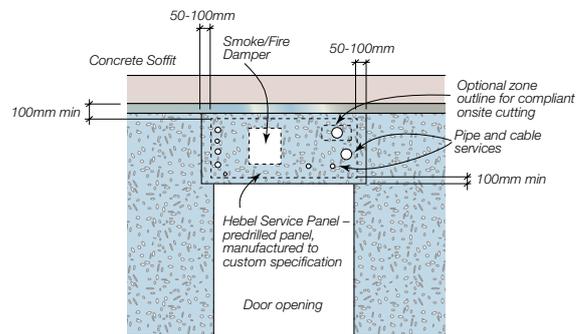

Notes:

- Installed in the same way as a standard Hebel panel above a door opening.
- Hebel Service Panels are custom made, with accurate machine cut service penetrations.
- Designed to meet each project's specific compliance requirements.

Figure 3.6.6.8 Power switch / outlet installation to panel side

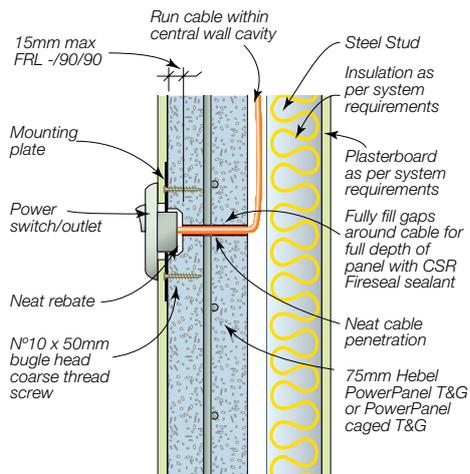


Figure 3.6.6.9 Power switch / outlet installation to steel stud or furring channel

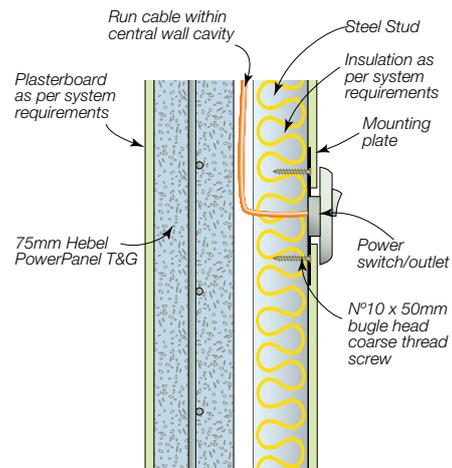


Figure 3.6.6.10 Cable installation within the cavity for switch / outlets located on both sides of wall


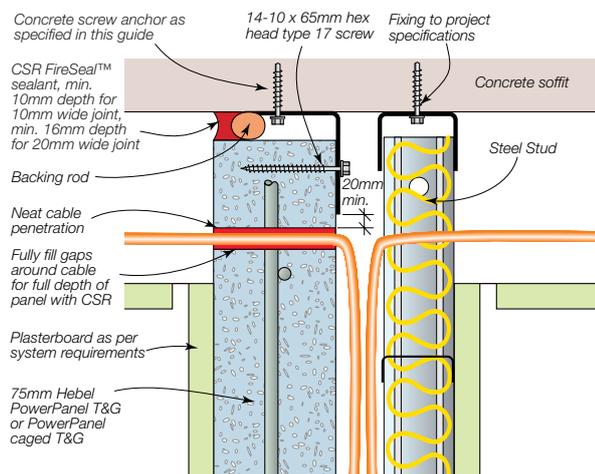


Figure 3.6.6.11 Fire damper penetration

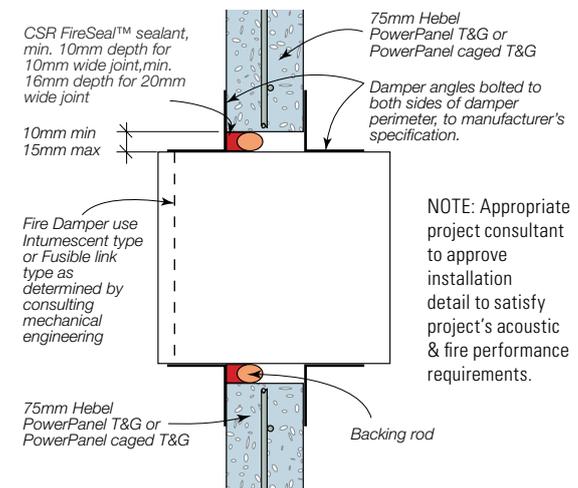

NOTE: Appropriate project consultant to approve installation detail to satisfy project's acoustic & fire performance requirements.

Figure 3.6.6.12 Plastic pipe penetration with in-wall type fire collar



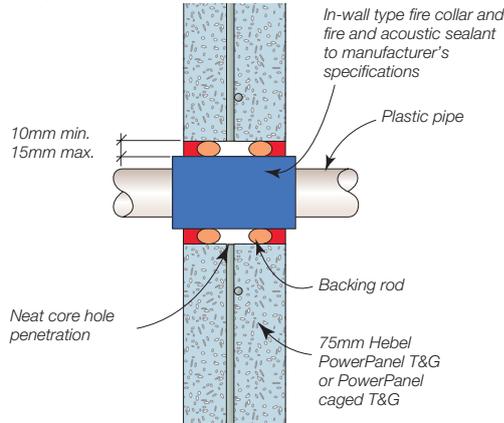


Figure 3.6.6.13 Plastic pipe penetration with wall mounted fire collar

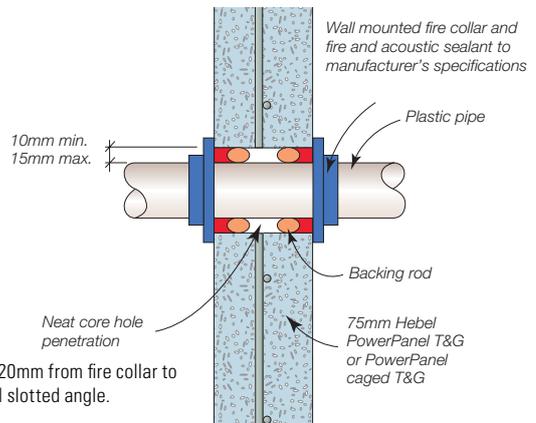


Note:
Min. 20mm from fire collar to Hebel slotted angle.

Figure 3.6.6.14 Details for maximum 300mm wide penetrations

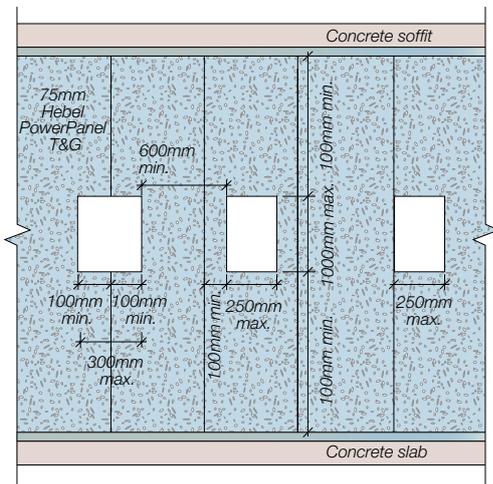


Notes:
1. Other penetrations above and below to vertically align.

Figure 3.6.6.15 Details for maximum 400mm wide penetrations

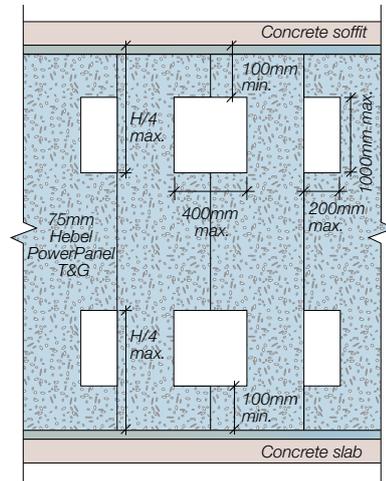


Notes:
1. Other penetrations above and below to vertically align.
2. No penetrations to be located in middle half of panel height.

Figure 3.6.6.16 Details for maximum 500mm wide penetrations

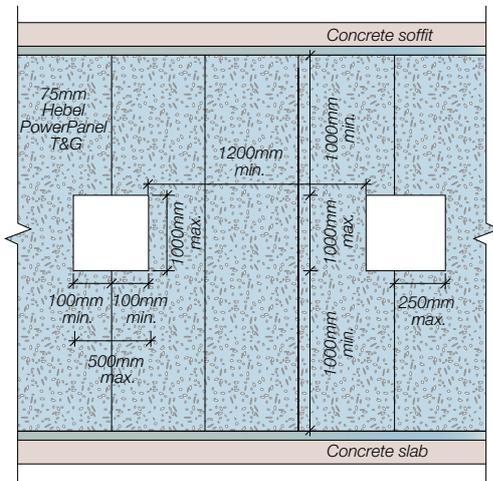

Notes:
1. Other penetrations above and below to vertically align.

Figure 3.6.6.17 Details for maximum 600mm wide penetrations





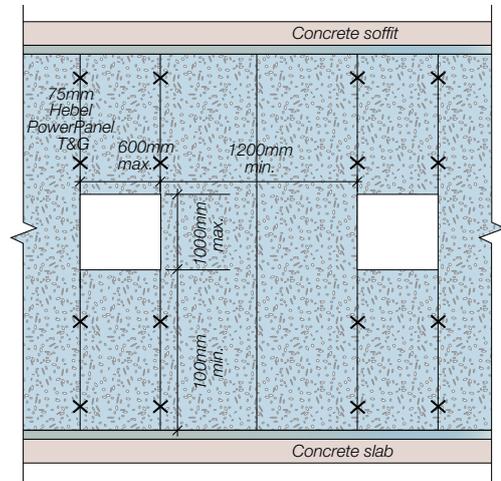


Notes:
• Other penetrations above and below to vertically align.
• 14-10 x 150mm hex head type 17 skewed screw sets at max. 900mm ctrs. in panel joints above and below penetration.






3.7 CONSTRUCTION DETAILS: FRL UP TO -/120/120

Hebel PowerPanel caged tongue & groove (T&G) vertical H < 4650mm

3.7.1 VERTICAL PANEL INSTALLATION: HEAD, BASE AND SIDE DETAILS

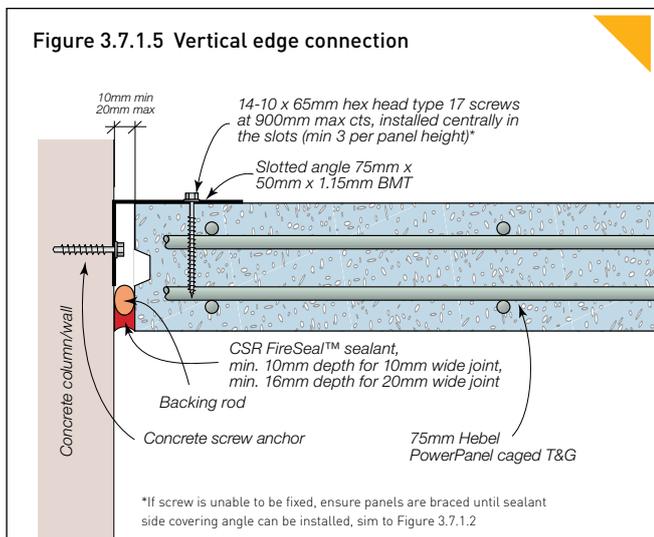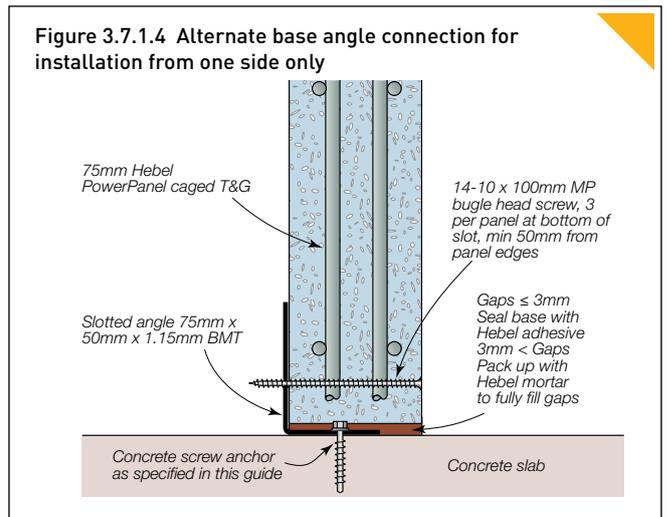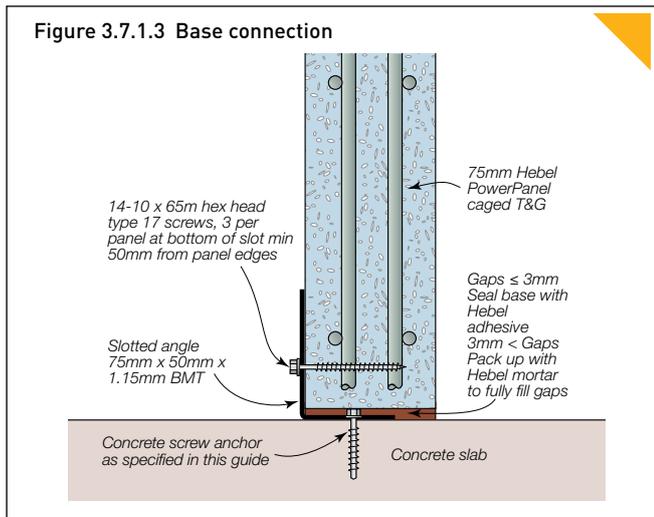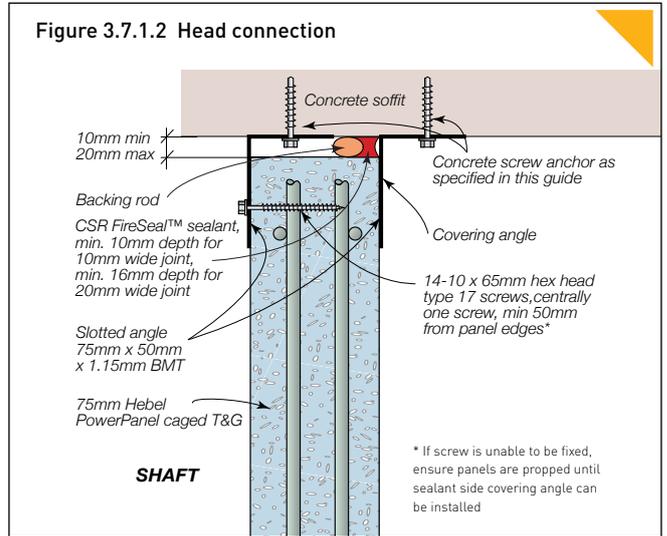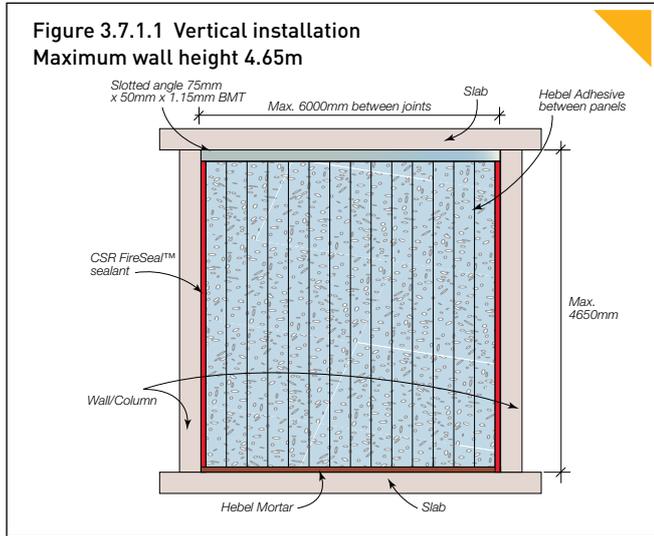

3.7.2 HORIZONTAL PANEL INSTALLATION: HEAD, BASE AND SIDE DETAILS

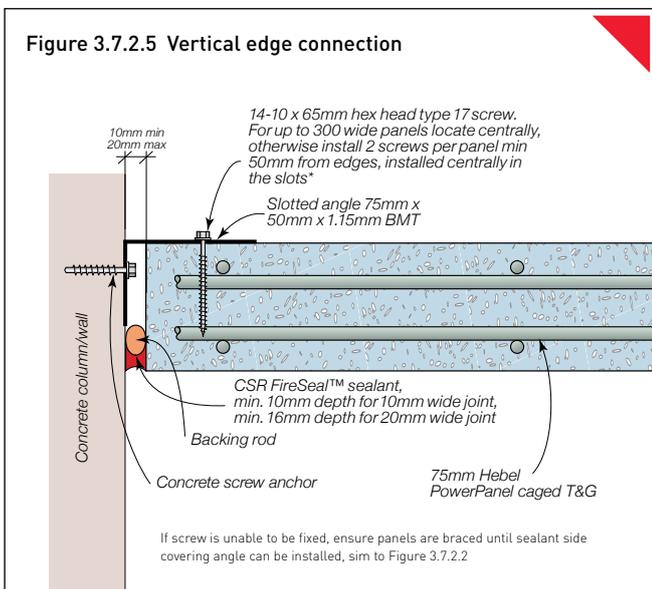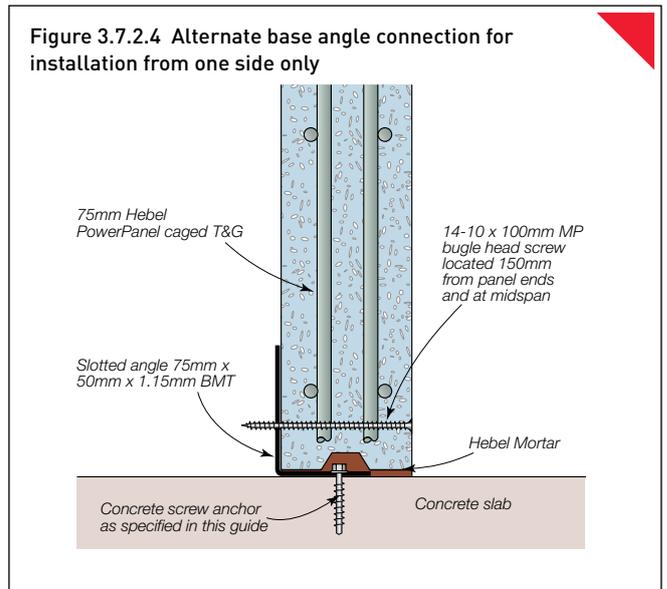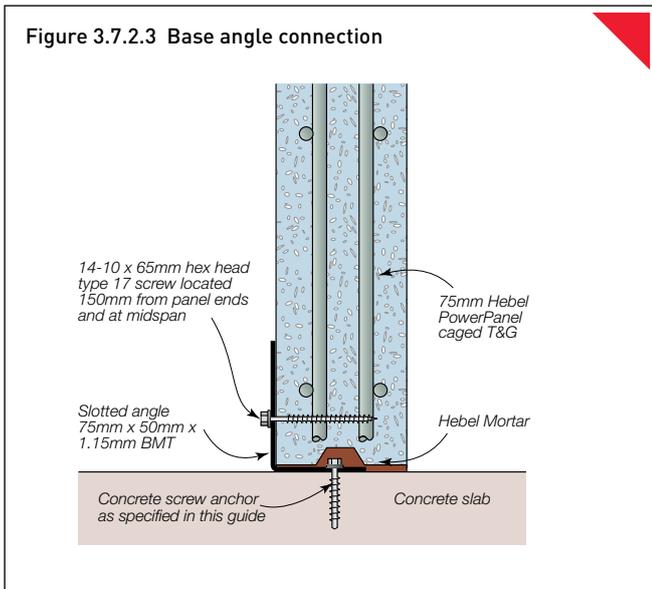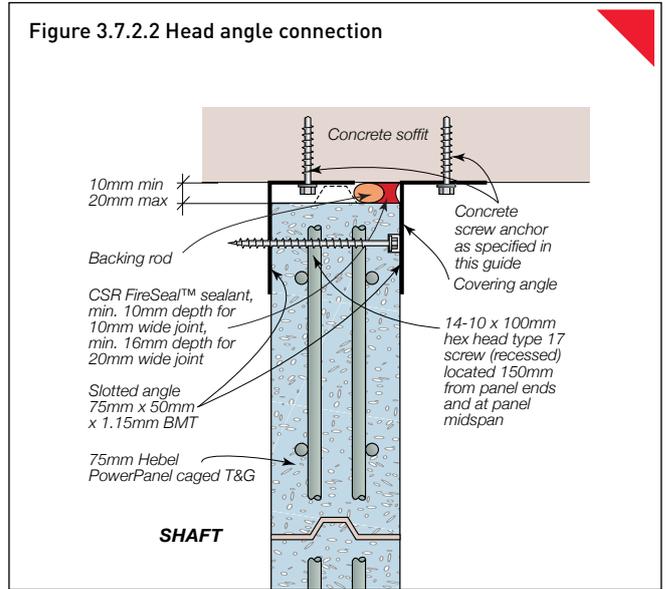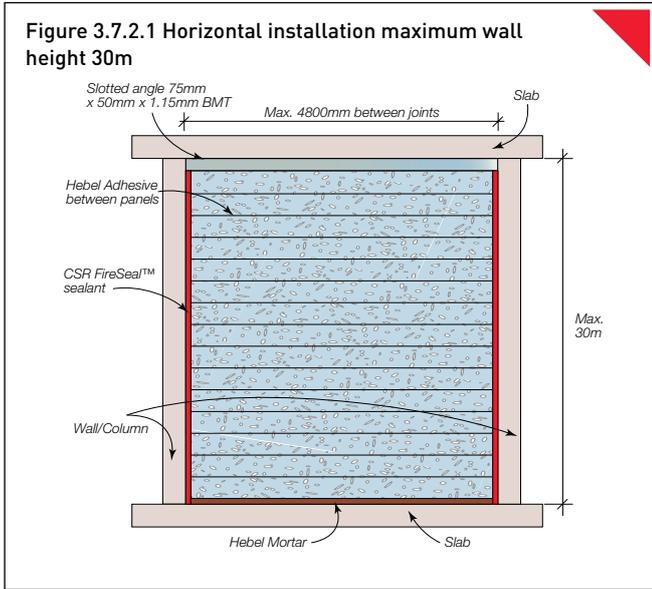

3.7.3 VERTICAL JUNCTION DETAILS

Figure 3.7.3.1 Tongue and groove junction for vertical or horizontal installation


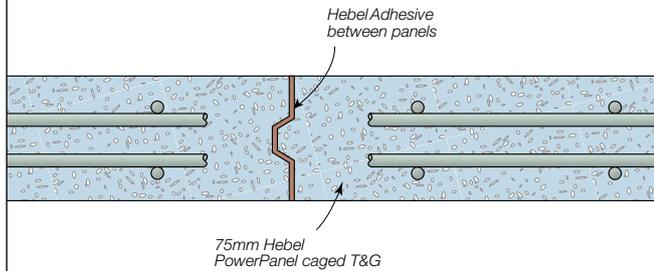



Figure 3.7.3.2 Splay corner junction for vertical panel installation only

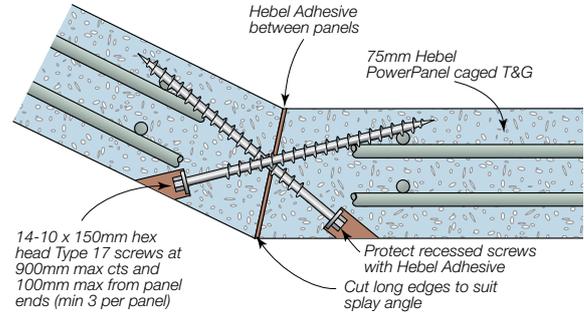

Note: this detail is only applicable for 90 mins FRL.

Figure 3.7.3.3 Corner junction for vertical or horizontal installation


Note: This figure is limited to a maximum wall height of 4.65m.

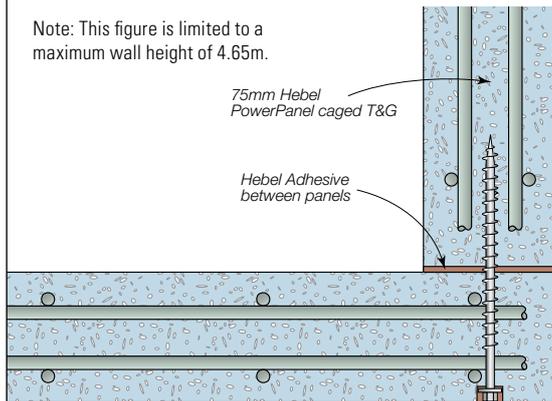

14-10 x 150mm hex head type 17 screws
Vertical installation: screws at 900mm max cts and 100mm max from panel ends (min 3 per panel height)
Horizontal installation: 2 Screws per panel.
Protect recessed screws with Hebel Adhesive


Figure 3.7.3.4 T-junction for vertical or horizontal installation

Note: This figure is limited to a maximum wall height of 4.65m.

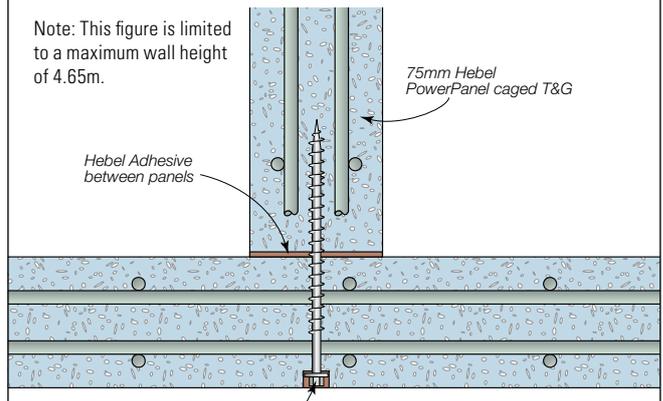


14-10 x 150mm hex head type 17 screws
Vertical installation: screws at 900mm max cts and 100mm max from panel ends (min 3 per panel height)
Horizontal installation: 2 Screws per panel.
Protect recessed screws with Hebel Adhesive

Figure 3.7.3.5 Large penetration in wall: option 1

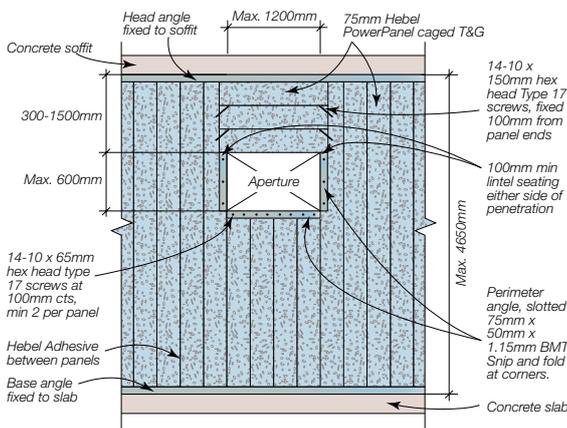

Adjust width of lintels 100mm each side of penetration

Figure 3.7.3.6 Large penetration in wall: option 2

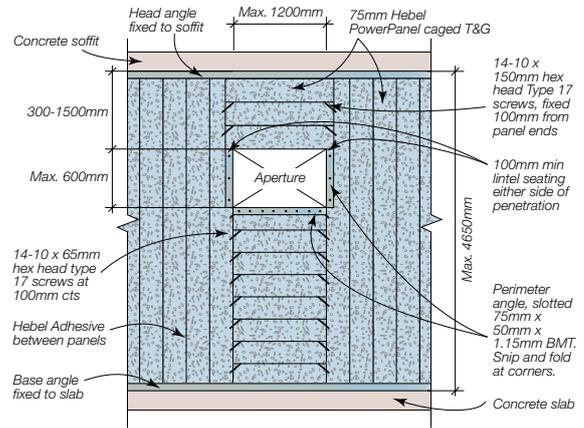

Adjust width of lintels 100mm each side of penetration

4.1 DELIVERY AND STORAGE

UNLOADING PANELS

Panels must be unloaded and moved with only approved lifting devices. Before use, the lifting devices should be checked for the required lifting tags. Panels should be unloaded as close as possible to the intended installation area. This will increase work efficiency and minimise the need for secondary lifting.

NOTE: Secondary handling increases the risk of panel damage. The repair of damage sustained during lifting and moving is the responsibility of the lifter. Where damage is excessive, panels must be replaced.

STORAGE

All materials should be kept dry and preferably stored undercover. Care should be taken to avoid sagging or damage to ends, edges and surfaces.

All Hebel products must be stacked on edge and properly supported off the ground, on a level platform. Panel bundles can be stacked two high.

The project engineer should be consulted as to the adequacy of the structure to support the stacked bundles. Each bundle contains ten PowerPanels. Where bundles are stacked two high the supporting cleats must be vertically aligned to ensure minimal bending of the lower panels. (see Figure 4.1.1). If Hebel PowerPanels are stored outside they must be stored off the ground and protected from the weather.

To provide a level surface we recommend placing temporary joists beneath the supporting cleats.

UNSTRAPPING PACKS

Ensure appropriate bracing is installed to packs prior to removal of strapping to prevent panels from falling. Panels can be held together with sash clamps, ratchet, straps or Hebel stabilising bars.

SAFE STACKING OF HEBEL

Figure 4.1.1 Stacking bundles of Hebel PowerPanel

- NEVER stack strapped panels more than two packs high.
- Brace all unstrapped panels – timber bracing can be used with 100mm screws
- NEVER place panels on council strips/footpaths or public access area
- ALWAYS check safe loadbearing weight when storing packs on structures

Note: Secondary handling increases the risk of panel damage. The repair of damage sustained during lifting and moving is the responsibility of the lifter. Where damage is excessive, panels must be replaced.

4.2 PANEL HANDLING

MANUAL HANDLING

Hebel recommends using a trolley or other mechanical apparatus to move the panels around the work site. Manual handling where people physically move a panel should be kept to a minimum, with the weight being supported by an individual kept as small as possible. Any concerns regarding the weight to be handled should be discussed with the panel installation contractor.

To minimise the possibility of manual handling injuries, Hebel suggests the following:

- Use mechanical aids, such as trolleys, forklifts, cranes and levers, or team lifting to move panels.
- Keep the work place clean to reduce the risk of slips, trips and falls, which can cause injury.
- Plan the sequence of installation to minimise panel movements and avoid awkward lifts.
- Train employees in good lifting techniques to minimise the risk of injury.

MECHANICALLY ASSISTED HANDLING

Moving and handling Hebel panels should be done as much as possible using mechanical aids such as forklifts, cranes and special panel lifting trolleys.

Figure 4.2.1 Hebel Panel Lifters are used for positioning panel in wall.



Figure 4.2.2 Hebel Panel Trolleys for easier and safer handling and cutting of Hebel PowerPanels.

HEALTH, SAFETY & PERSONAL PROTECTIVE EQUIPMENT (PPE)



Use PPE gloves and wear suitable clothing when handling Hebel panels and blocks. Hebel products are cement-based, and though the dust is not absorbed through the skin it may cause irritation – particularly in association with heat and sweat. Repeated heavy contact with the dust can result in skin rash, called dermatitis, which typically affects the hands. To minimise exposure to dust on your skin we recommend wearing gloves (standard duty leather or equivalent AS 2161).

Dust from cement-based products is irritating to the eyes, causing watering and redness with the potential to aggravate certain eye conditions. When cutting, sawing, abrading, chasing or crushing Hebel panels or blocks we advise you to wear safety glasses with side shields or safety goggles (AS 1336) or a face shield.

Approved respirators (AS/NZS 1715 and AS/NZS 1716) and eye protection (AS 1336) should be worn at all times when cutting and chasing.



CUTTING

The use of power tools when cutting concrete products may cause dust, which contains respirable crystalline silica, with the potential to cause bronchitis, silicosis and lung cancer after repeated and prolonged exposure without using the correct equipment and PPE.

Follow these recommendations when cutting Hebel AAC

Wet Cutting

- Wet cutting provides the lowest airborne concentration levels.
- Cut in an outdoor environment or a well-ventilated cutting room (with air movement of between 500 and 1000 m³/h).
- Use a circular saw with a retrofitted attachment with continuous water applied to the cutting surface and blade.
- Worker must be clean shaven and wear a fit tested P2 mask.
- Refer clean-up process below.

Dry Cutting - Dust Extraction

- Cut in outdoor environment or well-ventilated cutting room (with air movement of between 500 and 1000 m³/h).
- Plunge saw or circular saw (enclosed blade is preferred) fitted with on-tool dust extraction, M or H Class industrial vacuum.
- Cut 2-5mm from full thickness of panel and support with cutting board in place (cutting board prevents escape of any residual dust).
- Stand on the enclosed side of the saw shroud and upwind.
- Worker must be clean shaven and wear a fit tested P2 mask.

NO Controls = NO CUTTING

DO NOT CUT in uncontrolled cutting environments as exposure limits will be exceeded

- DO NOT dry cut without on tool local exhaust ventilation extraction.
- DO NOT cut with on tool extraction in an enclosed space without mechanical ventilation.
- DO NOT cut as P2 mask DOES NOT provide adequate protection, even when fit tested and clean shave. P2 mask must be used in conjunction with wet cutting or dust extraction/dry cutting method.
- DO NOT dry sweep.

Note: Steel reinforcement exposed during cutting must be coated with a liberal application of Hebel Anti-Corrosion Protection Paint.

CLEANING – AVOID THE GENERATION OF DUST

- Wet cutting - slurry must be mixed with a quarter of a bag of Hebel Adhesive to harden before disposal in trade waste.
- Place waste in a sealed bag or container and dispose as trade waste.
- Dust extraction – vacuum bag is sealed (double bag for additional safety) and safely disposed of with trade waste.
- Use vacuum system with class M or H HEPA filter fitted to clean up where required.
- Avoid dust creation (e.g. by wet sweeping).
- Worker must be clean shaven and wear a fit tested P2 mask.



Refer to the Hebel Safety Data Sheets for further information regarding health and safety.

www.hebel.com.au

<https://hebel.com.au/working-safely-hebel/>

4.3 DESIGN, DETAILING AND PERFORMANCE RESPONSIBILITIES

Hebel engages independent acoustic testing laboratories to test and report on the acoustic performance of a wall in accordance with the relevant Australian Standards. Acoustic consultants use these reports as the basis for opinions (estimates of laboratory performance) they issue for variations or different arrangements to the tested system, and also to design and specify walls that meet appropriate criteria for a particular project. Using their experience, the acoustic consultant will make judgements about onsite installed performance of various walls. The performance levels of walls documented in this Design and Installation Guide are either what is reported in a test or the documented opinion of an acoustic consultant.

Responsibility for acoustic performance in projects is typically:

PROJECT ACOUSTIC CONSULTANT:

- Opinions on expected laboratory performance of wall configurations that vary from actual test configuration such as substitution products and components.
- Judgements about expected field performance using laboratory test reports and practical experience.
- Design, specification and certification of acoustic performance for individual projects. This involves the design and selection of building elements, such as walls and floors and their integration in the building considering the following:
 - Interface of different building elements and to the structure/substrate
 - Wall junctions
 - Penetrations
 - Flanking issues
 - Room/building geometry
 - Acoustic field testing

PROJECT CERTIFIER &/OR BUILDER:

- Identifying the acoustic performance requirements for the project in accordance with the National Construction Code (NCC) and clearly communicating this to relevant parties.
- Applicability of any acoustic information supplied by CSR Hebel including tests and opinions for the project.
- The project acoustic consultant's responsibilities detailed above if one is not engaged in the project.

CSR Hebel does not provide acoustic consulting services and does not offer acoustic advice. CSR Hebel only provides information that has been prepared by others and CSR Hebel therefore shall not be considered experts in the field. Any party using the information contained in this Design and Installation Guide or supplied by CSR Hebel in the course of a project must satisfy themselves that it is true, accurate and appropriate for the application, consequently accepting responsibility for its use. CSR Hebel is not responsible for the acoustic performance of constructed walls, including field performance, and does not interpret or make judgements about acoustic performance requirements in the National Construction Code (NCC).

The above is applicable to other design criteria such as fire and structure.

5.1 APPENDIX 1

HEBEL POWERPANEL MATERIAL PROPERTIES

PowerPanel physical properties

1. Nominal dimensions and profiles of standard and custom Hebel PowerPanel are shown in Section 1.11.
2. Standard Hebel PowerPanel has a single layer of steel reinforcement consisting of 4 longitudinal bars of 5mm diameter.
3. Custom Hebel PowerPanel has a single or double layer of steel reinforcement consisting of 4 or 5 longitudinal bars of 5mm diameter.
4. Nominal dry density = 510kg/m³.
5. Average working density = 663kg/m³ at 30% moisture content.
6. Average service life density = 561kg/m³ at 10% moisture content.
7. For custom PowerPanel average working density = 707kg/m³ at 30% moisture content.

PowerPanel strength properties

1. Characteristic compressive strength, $f'_m = 2.8$ MPa.
2. Average compressive strength = 3.2 MPa.
3. Characteristic Modulus of Rupture, $f' = 0.60$ MPa.

PowerPanel fire rating properties

For FRL ratings of Hebel PowerPanel internal walls refer to fire opinions: FCO 3035 and 27915 and Fire Test Report FSV 0979.

PowerPanel acoustic properties

Hebel PowerPanel with no plasterboard or other lining
 $R_w = 36$ dB (refer to ATF-676 test.)

PowerPanel thermal properties

R-Value of Hebel PowerPanel with no plasterboard or other lining = 0.45m²K/W at 4% moisture content.



CSR HEBEL

Trinity 3, 39 Delhi Road
North Ryde NSW 2113, Australia
Telephone +61 2 9235 8000

Health & safety

Information on any known health risks of our products and how to handle them safely is on product packaging and / or the accompanying documentation. Additional information is listed in the Safety Data Sheet (SDS). To obtain a copy of a SDS, download from www.hebel.com.au. Contractors are required by law to perform their own risk assessments before undertaking work.

Performance & certification

Hebel® products and systems are developed in Australia by CSR Building Products. ABN. 55 008 631 356. It is a manufacturer and supplier of Hebel Autoclaved Aerated Concrete (AAC) products. Because it is a manufacturer and supplier only, CSR does not employ people qualified as Accredited or Principal Certifiers. CSR is therefore unable to provide Construction Compliance Certificates or Statements of Compliance. CSR conducts appropriate testing of its products and systems to determine performance levels. These include structural, fire and acoustic tests. Testing is conducted and certified by appropriate specialists in these fields. When using Hebel products and systems in specific projects, such specialists should be consulted to ensure compliance with the Building Code of Australia and relevant Australian Standards.

Disclaimer

The products referred to in this document have been manufactured by or on behalf of CSR Building Products Limited ("CSR") to comply with the Building Code of Australia and any relevant Australian Standards. While any design or usage guidelines set out in this document have been prepared in good faith by CSR, they are of a general nature only and are intended to be used in conjunction with project specific design and engineering advice. It is the responsibility of the customer to ensure that CSR's products are suitable for their chosen application, including in respect of project-specific matters such as, but not limited structural adequacy, acoustic, fire resistance/combustibility, thermal, and weatherproofing requirements. All information relating to design/ installation/application of these products is offered without warranty and no responsibility can be accepted by CSR for errors and omissions, or for any use of the relevant products not in accordance with CSR's technical literature or any other relevant industry standards. For current technical and warranty documentation relating to CSR's products, visit www.hebel.com.au

Other

The design of a wall, floor or fence system requires the services of professional consultants. This document has been prepared as a source of information to provide general guidance to those consultants – and in no way replaces the services of the professional consultant and relevant engineers designing the project.

No liability can therefore be accepted by CSR or other parties for the use of this document. Hebel products and systems undergo constant research and development to integrate new technology and reflect ongoing performance enhancement.

Hebel systems are constantly reviewed so as to reflect any changes in legislative building requirements and or general developments in common building practice, due to our commitment to continual development and improving our building systems.

We advise that all users of this document should regularly check that this document is current, and they are applying our latest design information.

The latest editions of our documents are available on our website:

www.hebel.com.au

Hebel® is a registered trademark of the Xella group. CSR Building Products Ltd is an exclusive licensee of Xella. CSR Hebel is a business of CSR Building Products Ltd ABN 55 008 631 356.

CSR, PowerPanel®, is a registered trademark of CSR Building Products Limited.

THE BETTER WAY TO BUILD

Hebel is a quality building product, and is backed by CSR Building Products Limited.

For more information visit our website:

www.hebel.com.au

For sales enquiries or further information, please telephone us from anywhere in Australia:

1300 369 448

Working Safely with Hebel

www.hebel.com.au/working-safely-hebel/

